

DRIVE **RITE**

AIR SUSPENSION SYSTEMS

Application Guide


North West Business Park
Ballcoolin
Dublin 15
Ireland

Tel: +353 1 8612 632

Fax: +353 1 8612 647

Email: info@driveriteair.com

Web: www.driveriteair.com

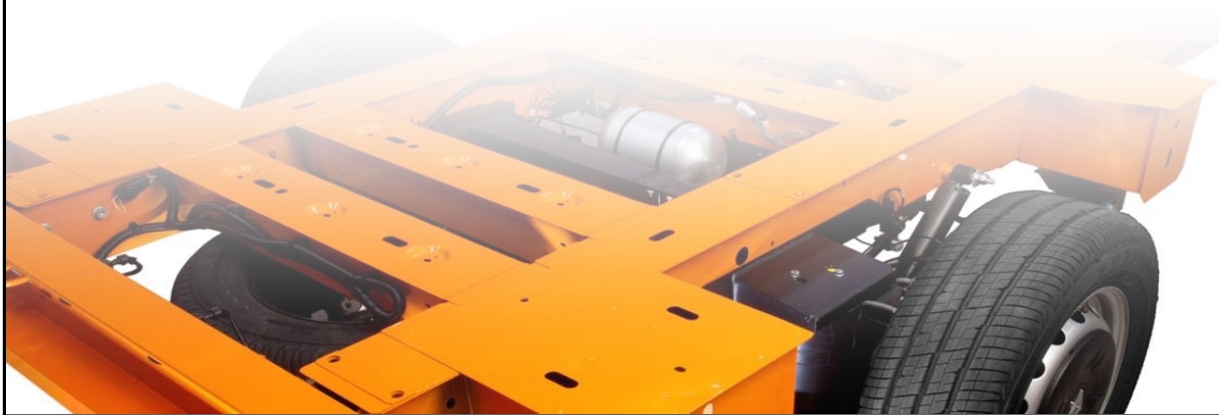

DRIVE RITE

AIR SUSPENSION SYSTEMS

Table of Contents

Contents

General kit descriptions	3
Available Kits by Vehicle	4-29

Control kits

-Universal Controls	30
-Integrated Controls	31

Intelliride	32
Air Springs	33/34
Compressors	35



Available Vehicles:

Acura	4	Kia	19
Audi	4	Land Rover	19
Buick	4	Lexus	19
Cadillac	5	Lincoln	19
Chevrolet/GMC Cars & SUVs	5/6	Mazda	20
Chevrolet/GMC Pickup Trucks	6/7	Mercedes-Benz	20
Chevrolet/GMC Vans, Commercial Vehicles & Motorhomes	8	Mercury	20
Chrysler	9	Mitsubishi	21
Citroen	9	Nissan	21/22
Daihatsu	9	Oldsmobile	22
Dodge/Ram	9/10	Opel	23
Dodge/Ram Pickup Trucks	10	Peugeot	23
Fiat	11	Plymouth	24
Ford Cars, SUVs & Rangers	11	Pontiac	24
Ford Commercials & Motorhomes & Vans	12/13	Renault	24/25
Ford Pickup Trucks (without in bed hitch)	14/15	Saturn	25
Ford Pickup Trucks (with in bed hitch)	16/17	Scion	25
Freightliner / Oshkosh / John Deere	17	Ssangyong	25
Honda	17	Sterling	25
Hummer	18	Suzuki	25
Hyundai	18	Toyota	26/27
Infiniti	18	Vauxhall	27
International	18	Volkswagen	27/28
Isuzu	18	Volvo	29
Iveco	18	Workhorse	29
Jeep	19		

** If you cannot find your vehicle contact us directly and we can help you **

Kit Codes: C/R = Coil-Rite™ S/A = Semi-Air
L/R = Level-Rite™ F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Kit Types: Full Air, Semi-Air, Coil-Rite, Level-Rite & Work-Rite

Drive-Rite have developed a wide range of Full-Air Suspension Systems for many vehicle applications. Drive-Rite's suspension systems offer a smooth comfortable ride, lowering facility, multiple ride heights, are easy to install, user friendly and require little or no maintenance.

Full Air Suspension




Semi-Air Suspension

Drive-Rite air assist springs can be installed on most light commercial vehicles, motorhomes, vans and SUVs. Semi-Air Systems work with leaf spring applications. The double convoluted and tapered sleeve air springs offer comfort, and maximum load support.

Coil-Rite Suspension kits work inside the coil springs of the vehicle. Adding support and control, and for a better ride experience.

Coil-Rite Suspension

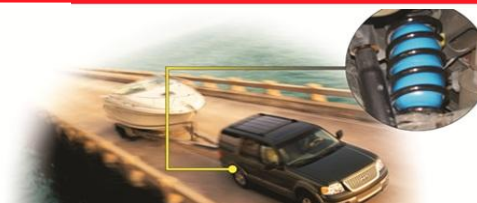

Work-Rite and Level-Rite

Level-Rite and Work-Rite kits replace the shocks and the bumpstops in the vehicle with improved suspension options. Increasing stability and reducing overall suspension fatigue.

Key Symbols: ‡ = while supplies last
ⓘ = Intelliride Kit
Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite


Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Available Kits by Vehicle Model

Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
► Acura									
MDX	05-10			W237604179		Rear	C/R	WR17606110	WR17606112
RDX	07-Current			W237604133	‡	Rear	C/R	WR17606110	WR17606112
► Audi									
A3	10-Current			W237604176		Rear	C/R	WR17606110	WR17606112
A6	98-07			W237604105		Rear	C/R	WR17606110	WR17606112
► Buick									
Centurion	71-73			W237604116	‡	Rear	C/R	WR17606110	WR17606112
Century	82-96	Front Wheel Drive only		W237604103		Rear	C/R	WR17606110	WR17606112
Century	73-87	Rear Wheel Drive only		W237604114		Rear	C/R	WR17606110	WR17606112
Electra	85-96	not for station wagon		W237604107		Rear	C/R	WR17606110	WR17606112
Grand Sport	73-87			W237604114		Rear	C/R	WR17606110	WR17606112
LeSabre	00-04	Front Wheel Drive only, not for station wagon		W237604105		Rear	C/R	WR17606110	WR17606112
LeSabre	86-99	Front Wheel Drive only		W237604107		Rear	C/R	WR17606110	WR17606112
LeSabre	85	Rear Wheel Drive only		W237604116	‡	Rear	C/R	WR17606110	WR17606112
LeSabre Estate Wagon	77-90			W237604116	‡	Rear	C/R	WR17606110	WR17606112
LeSabre	65-84	not for station wagon		W237604116	‡	Rear	C/R	WR17606110	WR17606112
Luxus	73-87	Rear Wheel Drive only		W237604114		Rear	C/R	WR17606110	WR17606112
Park Avenue	97-05			W237604105		Rear	C/R	WR17606110	WR17606112
Park Avenue	85-96	not for station wagon		W237604107		Rear	C/R	WR17606110	WR17606112
Regal	73-87	Rear Wheel Drive only		W237604114		Rear	C/R	WR17606110	WR17606112
Riviera	95-98			W237604105		Rear	C/R	WR17606110	WR17606112
Riviera	79-85			W237604106		Rear	C/R	WR17606110	WR17606112
Roadmaster, Roadmaster Estate Wagon	91-96			W237604116	‡	Rear	C/R	WR17606110	WR17606112
Skyhawk	82-89			W237604104		Rear	C/R	WR17606110	WR17606112
Skylark	85-96			W237604104		Rear	C/R	WR17606110	WR17606112
Skylark	80-84			W237604103		Rear	C/R	WR17606110	WR17606112
Somerset	85-87			W237604104		Rear	C/R	WR17606110	WR17606112
Terraza Van	05-07			W237604155		Rear	C/R	WR17606110	WR17606112
Wildcat	65-69			W237604116	‡	Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
‡ = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM /  /  - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
 Cadillac									
All Rear Drive Models	65-93			W237604116	#	Rear	C/R	WR17606110	WR17606112
CTS, STS	06-Current			W237604168		Rear	C/R	WR17606110	WR17606112
Coupe Deville, Fleetwood, Sedan Deville, Touring Sedan	85-93	Front Wheel Drive only		W237604107		Rear	C/R	WR17606110	WR17606112
El Dorado	79-85			W237604106		Rear	C/R	WR17606110	WR17606112
Escalade, ESV, EXT	11-Current	4x2, 4x4, with Autoride suspension		W237604186		Rear	C/R	WR17606110	WR17606112
Escalade, ESV, EXT	02-Current	4x2, 4x4, Work-Rite Kit 8628 for '02-'06 Model only		W237604108		Rear	C/R	WR17606110	WR17606112
Escalade	99-00	4x2, 4x4, 4 door only		W217602101		Rear	S/A	WR17606110	WR17606112
Seville	80-85			W237604106		Rear	C/R	WR17606110	WR17606112
 Chevrolet/GMC Cars & SUVs									
Avalanche 1500, with Autoride suspension	11-Current	4x2, 4x4, Work-Rite Kit 8628		W237604186		Rear	C/R	WR17606110	WR17606112
Avalanche 1500	02-Current	4x2, 4x4, Work-Rite Kit 8628		W237604108		Rear	C/R	WR17606110	WR17606112
Aveo	10			W237604103		Rear	C/R	WR17606110	WR17606112
Beretta, Corsica	88-96			W237604104		Rear	C/R	WR17606110	WR17606112
Blazer (full size)	73-91	4x2		W237604100		Front	C/R	WR17606110	WR17606112
Camaro, Z-28, IROC-Z	82-02			W237604103		Rear	C/R	WR17606110	WR17606112
Caprice	71-96	not for station wagon		W237604116	#	Rear	C/R	WR17606110	WR17606112
Caprice	77-96	station wagon only		W237604116	#	Rear	C/R	WR17606110	WR17606112
Cavalier	82-94			W237604104		Rear	C/R	WR17606110	WR17606112
Celebrity	82-90			W237604103		Rear	C/R	WR17606110	WR17606112
Chevelle	73-83			W237604114		Rear	C/R	WR17606110	WR17606112
Denali XL 2500	00-09	4x2, 4x4		W217602253		Rear	S/A	WR17606110	WR17606112
				W217601003		Front	L/R		
El Camino	67-87			W237604114		Rear	C/R	WR17606110	WR17606112
Envoy	02-09	4x2, 4x4, with rear coil springs		W237604108		Rear	C/R	WR17606110	WR17606112
Equinox	05-06	4x2, 4x4		W237604167	#	Rear	C/R	WR17606110	WR17606112
HHR	11	not for station wagon		W237604141	#	Rear	C/R	WR17606110	WR17606112
Impala	71-96	not for station wagon		W237604116	#	Rear	C/R	WR17606110	WR17606112
Impala	77-96	station wagon only		W237604116	#	Rear	C/R	WR17606110	WR17606112
Jimmy (full size)	73-91	4x2		W237604100		Front	C/R	WR17606110	WR17606112
Laguna	73-83			W237604114		Rear	C/R	WR17606110	WR17606112
Malibu	73-83			W237604114		Rear	C/R	WR17606110	WR17606112
Monte Carlo (not SS)	73-88			W237604114		Rear	C/R	WR17606110	WR17606112

Key Symbols: = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
▶ Chevrolet/GMC Cars & SUVs (continued)									
Suburban 1500	11-Current	4x2, 4x4, with Autoride suspension		W237604186		Rear	C/R	WR17606110	WR17606112
Suburban 1500	00-10	4x2, 4x4, Work-Rite Kit 8628 for '00-'06 Model only		W237604108		Rear	C/R	WR17606110	WR17606112
Suburban 1500	92-99	4x2, 4x4		W217602101		Rear	S/A	WR17606110	WR17606112
Suburban 1500	73-91	4x2		W217602100		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
Suburban 1500	73-91	4x4		W217602100		Rear	S/A	WR17606110	WR17606112
Suburban 2500	00-09	4x2, 4x4		W217602253		Rear	S/A	WR17606110	WR17606112
		4x2, 4x4, Work-Rite Kit 8629		W217601003		Front	L/R		
Suburban 2500	92-99	4x2, 4x4		W217602101		Rear	S/A	WR17606110	WR17606112
Suburban 2500	73-91	4x2		W217602100		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
Suburban 2500	73-91	4x4		W217602100		Rear	S/A	WR17606110	WR17606112
Tahoe	11-Current	4x2, 4x4		W237604186		Rear	C/R	WR17606110	WR17606112
Tahoe	00-Current	4x2, 4x4, Work-Rite Kit 8628		W237604108		Rear	C/R	WR17606110	WR17606112
Tahoe	95-99	4x2, 4x4, 4 door only		W217602101		Rear	S/A	WR17606110	WR17606112
Police Tahoe	07-10	4x2, 4x4		W237604147		Rear	C/R	WR17606110	WR17606112
Trailblazer	02-09	4x2, 4x4		W237604108		Rear	C/R	WR17606110	WR17606112
Volt	12-Current			W237604118		Rear	C/R	WR17606110	WR17606112
Yukon 1500	11-Current	4x2, 4x4, with Autoride suspension		W237604186		Rear	C/R	WR17606110	WR17606112
Yukon 1500	00-Current	4x2, 4x4, Work-Rite Kit 8628 for '00-'06 Model only		W237604108		Rear	C/R	WR17606110	WR17606112
Yukon 1500	95-99	4x2, 4x4, 4 door only		W217602101		Rear	S/A	WR17606110	WR17606112
Yukon 1500	92-98	4x2, 4x4, 2 door only		W217602173		Rear	S/A	WR17606110	WR17606112
Yukon XL 2500	00-09	4x2, 4x4		W217602253		Rear	S/A	WR17606110	WR17606112
		4x2, 4x4, Work-Rite Kit 8629		W217601003		Front	L/R		
Yukon 2500	95-99	4x2, 4x4, 4 door only		W217602101		Rear	S/A	WR17606110	WR17606112
▶ Chevrolet/GMC Pickup Trucks									
C & K-1500	88-98	4x2, 4x4, Work-Rite Kit 8622		W217602025		Rear	S/A	WR17606110	WR17606112
C & K-1500	88-98	4x2		W217602162	+++	Rear	S/A	WR17606110	WR17606112
C & R10, 1500	73-87	4x2		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
C & K-2500	99-00	4x2, 4x4, with rear drum brakes, Work-Rite Kit 8624		W217602025		Rear	S/A	WR17606110	WR17606112
C & K-2500	88-98	4x2, 4x4, Work-Rite Kit 8624		W217602025		Rear	S/A	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/UTAC/TUV - For kit approval details please contact Drive-Rite



Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
▶ Chevrolet/GMC Pickup Trucks (continued)								
C & R20	73-87	4x2		W217602071	•	Rear	S/A	WR17606110
				W237604100		Front	C/R	
C & K-3500	88-00	4x2, 4x4		W217602025		Rear	S/A	WR17606110
C & R-30, C & R-3500	73-87	4x2		W217602071	•	Rear	S/A	WR17606110
C-30	67-87	4x2		W217602071	•	Rear	S/A	WR17606110
				W237604100		Front	C/R	
Colorado, Canyon	04-Current	4x2, not factory lowered ZQ8		W217602384		Rear	S/A	WR17606110
K & V-10, 1500	73-87	4x4		W217602040	•••	Rear	S/A	WR17606110
K & V-20, 2500	73-87	4x4		W217602040	•••	Rear	S/A	WR17606110
K & V-30, 3500	73-87	4x4		W217602040	•••	Rear	S/A	WR17606110
S-10 Crew Cab	04	4x2		W217602209		Rear	S/A	WR17606110
S-10, Sonoma	82-03	4x2, not factory lowered ZQ8		W217602209		Rear	S/A	WR17606110
Silverado, Sierra 1500	07-Current	4x2, 4x4, Work-Rite Kit 8605		W217602430		Rear	S/A	WR17606110
Silverado Classic, Sierra Classic 1500	07	4x2, 4x4, Work-Rite Kit 8605		W217602320	++	Rear	S/A	WR17606110
Silverado, Sierra 1500	99-06	4x2, 4x4, not Heavy Duty. Work-Rite Kit 8605 rear. <i>Work-Rite Kit 8629 front (4x2 only)</i>		W217602320	++	Rear	S/A	WR17606110
Silverado, Sierra 1500HD	05-06	4x2, 4x4, not quad-steer, Work-Rite Kit 8625		W217602190		Rear	S/A	WR17606110
		4x2, 4x4, not quad-steer, Work-Rite Kit 8629		W217601003		Front	L/R	
Silverado, Sierra 1500HD	01-03	4x2, 4x4, not quad-steer, Work-Rite Kit 8625		W217602190		Rear	S/A	WR17606110
		4x2, 4x4, not quad-steer, Work-Rite Kit 8629		W217601003		Front	L/R	
Silverado, Sierra C2500	99-05	4x2, 4x4, not Heavy Duty. Work-Rite Kit 8625 rear. <i>Work-Rite Kit 8629 front (4x4 only)</i>		W217602190		Rear	S/A	WR17606110
				W217601003		Front	L/R	
Silverado, Sierra 2500HD	11-Current	4x2, 4x4, not Heavy Duty. Work-Rite Kit 8632 rear kit. <i>Work-Rite Kit 8635 front</i>		W217602528		Rear	S/A	WR17606110
Silverado, Sierra 2500HD	01-10	4x2, Work-Rite Kit 8609.		W217602250		Rear	S/A	WR17606110
		4x2, Work-Rite Kit 8629.		W217601003		Front	L/R	
Silverado, Sierra 2500HD	01-10	4x4, Work-Rite Kit 8610.		W217602250		Rear	S/A	WR17606110
		4x4, Work-Rite Kit 8629.		W217601003		Front	L/R	
Silverado, Sierra 3500HD	11-Current	4x2, 4x4, not Heavy Duty. Work-Rite Kit 8632 rear kit. <i>Work-Rite Kit 8635 front kit</i>		W217602528		Rear	S/A	WR17606110
Silverado, Sierra 3500HD	01-10	4x2, Work-Rite Kit 8609.		W217602250		Rear	S/A	WR17606110
		4x2, Work-Rite Kit 8629.		W217601003		Front	L/R	
Silverado, Sierra 3500HD	01-10	4x4, Work-Rite Kit 8610.		W217602250		Rear	S/A	WR17606110
		4x4, Work-Rite Kit 8629.		W217601003		Front	L/R	


Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM /  /  - For kit approval details please contact Drive-Rite


Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Chevrolet/GMC Vans, Commercial Vehicles & Motorhomes									
Astro, Safari	99-05	4x2, 4x4		W217602361		Rear	S/A	WR17606110	WR17606112
C-2500 HD, C-3500 HD	01-10	4x2, 4x4, Commercial Vehicle (vehicles without factory bed) Work-Rite Kit 8617 rear kit. <i>Work-Rite Kit 8629 front kit</i>		W217602249		Rear	S/A	WR17606110	WR17606112
				W217601003		Front	L/R		
C3500HD	11-Current	4x2, 4x4, Commercial Vehicle (vehicles without factory bed). Work-Rite Kit 8633 rear kit. <i>Work-Rite Kit 8635 front kit</i>		W217602176	●	Rear	S/A	WR17606110	WR17606112
C-3500 (Type I ambulance chassis)	88-00	Commercial Vehicle (vehicles without factory bed)		W217602065	●●●,‡	Rear	S/A	WR17606110	WR17606112
C-4500, C-5500	02-09	4x2, Commercial Vehicle (vehicles without factory bed)		W217602362	●	Rear	S/A	WR17606110	WR17606112
				W217602451		Front	S/A		
G-1500	03-09	6 lug nuts, GVWR 7200		W217602423		Rear	S/A	WR17606110	WR17606112
G-1500, G-2500	96-02	6 lug nuts		W217602163	+++	Rear	S/A	WR17606110	WR17606112
G-10, G-20, G-30, G-1500, G-2500, G-3500	70-95			W217600830		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
G-2500 G-3500	03-10	8 lug nuts, Over 8600 GVW, single rear wheel		W217602337		Rear	S/A	WR17606110	WR17606112
G-2500 G-3500	96-02	8 lug nuts, Over 8600 GVW, single rear wheel		W217602185	‡	Rear	S/A	WR17606110	WR17606112
G-4500 (with dual rear wheels)	08-Current	Commercial Vehicle (vehicles without factory bed)		W217602173		Rear	S/A	WR17606110	WR17606112
G-3500 (with dual rear wheels)	98-Current	Commercial Vehicle (vehicles without factory bed)		W217602173		Rear	S/A	WR17606110	WR17606112
G-3500, G-4500 (with dual rear wheels)	98-Current	Motorhome Class "C". Work-Rite Kit 8619 rear kit.		W217602173		Rear	S/A	WR17606110	WR17606112
G-30, G-3500	70-95	Motorhome Class "C", Commercial Vehicle (without factory bed)		W217600830		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
GP-30 HD (cutaway)	93-96	Motorhome Class "A", 10,500 to 12,300 GVWR		W217602080		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
GP-30 HD (cutaway)	93-96	Motorhome Class "A", 14,500 GVWR		W217602085		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
Lumina APV	90-96			W237604110	‡	Rear	C/R	WR17606110	WR17606112
P-30	93-96	10,500 to 12,800 GVWR with jounce bumpers mounted at bottom of frame rails.		W217602080		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
P-30	93-99	14,500 to 1600 GVWR		W217602147	●	Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
P-30	93-99	14,500 to 17,000, with jounce bumper mounted above leaf springs		W217602085		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
P-30	63-92	with jounce bumpers mounted at bottom of frame rails		W217602080		Rear	S/A	WR17606110	WR17606112
				W237604100		Front	C/R		
Uplander	05-09			W237604155		Rear	C/R	WR17606110	WR17606112
W-3500	96-09	Commercial Vehicle (vehicles without factory bed)		W217602449		Rear	S/A	WR17606110	WR17606112
				W217602440		Front	S/A		

Key Symbols: ‡ = while supplies last
 = Intelliride Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"
‡ = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/   - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
► Chrysler									
Aspen	07-09	4x2, 4x4		W237604152		Rear	C/R	WR17606110	WR17606112
Imperial, New Yorker 5th Ave. Landau and Salon	90-94			W237604105		Rear	C/R	WR17606110	WR17606112
Le Baron, GTS, TC By Maserati	82-95			W237604105		Rear	C/R	WR17606110	WR17606112
PT Cruiser, PT Cruiser Classic	01-11			W237604139		Rear	C/R	WR17606110	WR17606112
Voyager, Town and Country, New Yorker	84-89	station wagon only		W237604105		Rear	C/R	WR17606110	WR17606112
Voyager, Town and Country	96-07	Work-Rite Kit 8627		W217601005		Rear	L/R	WR17606110	WR17606112
Voyager, Town and Country	08-Current			W237604169		Rear	C/R	WR17606110	WR17606112
► Citroën									
Berlingo C4	08-Current	Electronic Height Control-With Lowering (Not Automatic)		W217603168		Rear	F/A	Included	Included
C25-Euro Chassis 280/290	88-93	All Applications ϕ		W217602112	ϕ	Rear	S/A	WR17606110	WR17606112
C8	02-Current	Electronic Height Control-With Lowering		W217603516		Rear	F/A	Included	Included
Dispatch-Jumpy	96-06			W237604143	#	Rear	C/R	WR17606110	WR17606112
Dispatch-G9	07-Current			W237604264		Rear	C/R	WR17606110	WR17606112
Dispatch-G10	07-Current	Electronic Height Control-With Lowering (Not Suitable for SWB)		W217603496	ϕ	Rear	F/A	Included	Included
Jumper/Relay Euro Chassis X230/X244	94-06	All Applications ϕ		W217602110		Rear	S/A	WR17606110	WR17606112
Jumper/Relay Euro Chassis X250	06-Current	Standard Kit to Suit all Applications-ABS Vehicles Only		W217602428		Rear	S/A	WR17606114	WR17606115
Jumper/Relay Euro Chassis X250	06-Current	Larger Springs(For Extra Comfort) ABS Vehicles Only		W217602429		Rear	S/A	WR17606114	WR17606115
Jumper/Relay Euro Chassis X250	06-Current	Driverite Comfort Improvement Kit		W217603202		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
► Daihatsu									
Rocky	00-07			W237604580		Rear	C/R	WR17606110	WR17606112
► Dodge/Ram									
400, 600, Lancer, Daytona	82-94			W237604105		Rear	C/R	WR17606110	WR17606112
Aries	81-89			W237604105		Rear	C/R	WR17606110	WR17606112
B100, B150, B200, B250, B300, B350, 1500, 2500, 3500, MB300, MB400	77-03	Motorhome Class "C"		W217602109		Rear	S/A	WR17606110	WR17606112
B100, B200, B300	71-76	Motorhome Class "C"		W217600830		Rear	S/A	WR17606110	WR17606112
Dynasty, Spirit	90-94			W237604105		Rear	C/R	WR17606110	WR17606112
Caravan, Grand Caravan	96-07	Work-Rite Kit 8627		W217601005		Rear	L/R	WR17606110	WR17606112
Caravan, Grand Caravan, C/V	08-Current			W237604169		Rear	C/R	WR17606110	WR17606112
D3500, W3500 (cab & chassis)	94-02	4x2, 4x4, Commercial Vehicle (vehicles without factory bed)		W217602220		Rear	S/A	WR17606110	WR17606112
Dart	12-Current			W237604178		Rear	S/A	WR17606110	WR17606112
Durango	97-02	4x2, 4x4 (Not SXT)		W217602222		Rear	S/A	WR17606110	WR17606112
Durango	04-09	4x2, 4x4		W237604152		Rear	C/R	WR17606110	WR17606112
Durango	11-Current	4x2, 4x4		W237604184		Rear	C/R	WR17606110	WR17606112
Nitro	07-08	4x2, 4x4		W237604146		Rear	C/R	WR17606110	WR17606112
Ram 2500, 3500 (not dually)	04-08	4x2, 4x4, Commercial Vehicle (vehicles without factory bed)		W217602299		Rear	S/A	WR17606110	WR17606112
Ram 3500 (dually only)	06-08	4x4, Commercial Vehicle (vehicles without factory bed)		W217602299		Rear	S/A	WR17606110	WR17606112

Key Symbols: # = while supplies last

= IntelliRide Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
► Dodge/Ram (continued)									
Ram 3500 HD (cab & chassis)	07-11	4x2, 4x4, Commercial Vehicle (vehicles without factory bed)		W217602478	+	Rear	S/A	WR17606110	WR17606112
Ram 4500, 5500 (requires 2" clearance)	07-11	4x2, 4x4, Commercial Vehicle (vehicles without factory bed)		W217602404	●●●	Rear	S/A	WR17606110	WR17606112
Shadow	87-94			W237604105		Rear	C/R	WR17606110	WR17606112
Sprinter 2500 (cab & chassis)	02-06	Motorhome Class "C", Commercial Vehicle (vehicle without factory bed)		W217602312	+++	Rear	S/A	WR17606110	WR17606112
Sprinter 3500 (van and cab & chassis)	02-06	Motorhome Class "C", Commercial Vehicle (vehicle without factory bed)		W217602425		Rear	S/A	WR17606110	WR17606112
Sprinter 3500 (cab & chassis)	02-06	Motorhome Class "C", Commercial Vehicle (vehicle without factory bed)		W217602382		Rear	S/A	WR17606110	WR17606112
► Dodge/Ram Pickup Trucks									
Ram 50	80-93	Requires 3" tire to frame clearance		W217601130	●●	Rear	S/A	WR17606110	WR17606112
Dakota Club Cab	05-11	4x2, 4x4 (Requires 6.5" tire to frame clearance)		W217602378	+++	Rear	S/A	WR17606110	WR17606112
Dakota Quad Cab	05-11	4x2, 4x4 (Requires 6.5" tire to frame clearance)		W217602379	+++	Rear	S/A	WR17606110	WR17606112
Dakota Standard & Crew Cab	97-02	4x2 only (Requires 6.5" tire to frame clearance)		W217602169	+++	Rear	S/A	WR17606110	WR17606112
Dakota	97-03	4x4 only (not crew cab) (Requires 6.5" tire to frame clearance)		W217602162	+++	Rear	S/A	WR17606110	WR17606112
Dakota Crew Cab	00-03	4x4 only (Requires 6.5" tire to frame clearance)		W217602217	+++	Rear	S/A	WR17606110	WR17606112
Ram 1500	09-12	4x2, 4x4, Not Ram Runner		W217602518		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Ram 1500	09-12	4x2, 4x4, Not Ram Runner		W237604190		Rear	C/R	WR17606110	WR17606112
Ram 1500	02-08	4x2, 4x4, Work-Rite Kit 8607		W217602286		Rear	S/A	WR17606110	WR17606112
Ram 1500 Mega Cab	06-08	4x2, 4x4, Work-Rite Kit 8621 Front Kit		W217602299		Rear	S/A	WR17606110	WR17606112
Ram 1500	06-08	4x2, 4x4 (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
				W237604111		Front	C/R		
Ram 1500	94-01	4x2		W217602071	●	Rear	S/A	WR17606110	WR17606112
				W237604111		Front	C/R		
Ram 1500	94-01	4x2 only (Requires 6.5" tire to frame clearance)		W217602162	+++	Rear	S/A	WR17606110	WR17606112
				W237604111		Front	C/R		
Ram 1500	94-01	4x4 only (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
D & W 100, Ram 1500. D & W 200, Ram 2500. D & W 300, Ram 3500.	69-93	4x2, 4x4 (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
Ram 2500	03-11	4x2 only (Not power wagon for LS product)		W217602299		Rear	S/A	WR17606110	WR17606112
Ram 2500	03-11	4x4 only (Not power wagon for LS product)		W217602299		Rear	S/A	WR17606110	WR17606112
				W217601004		Front	L/R		
Ram 2500	94-02	4x2 only (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
				W237604111		Front	C/R		
Ram 2500	94-02	4x4 only (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
Ram 2500	94-98	4x2, 4x4 (With contcat overlod springs)		W217602220		Rear	S/A	WR17606110	WR17606112
Ram 3500	03-11	4x4 only		W217602299		Rear	S/A	WR17606110	WR17606112
				W217601004		Front	L/R		
Ram 3500	94-02	4x2, 4x4 (Requires 7.5" tire to frame clearance)		W217602071	●	Rear	S/A	WR17606110	WR17606112
		4x2 only		W237604111		Front	C/R		
Ram 3500	03-06	4x2 only		W217602299		Rear	S/A	WR17606110	WR17606112
Ram 3500	07-11	4x2 only		W217602299		Rear	S/A	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last

= Intelliride Kit

= Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"





= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Fiat									
Doblo	10-Current			W237604249		Rear	C/R	WR17606110	WR17606112
Doblo	10-Current	Electronic Height Control-With Lowering		W217603517		Rear	F/A	Included	Included
Ducato Euro Chassis 280/290	88-93	All Applications Φ		W217602112	Φ	Rear	S/A	WR17606110	WR17606112
Ducato Euro Chassis X230/X244	94-06	All Applications Φ		W217602110	Φ	Rear	S/A	WR17606110	WR17606112
Ducato Euro Chassis X250	06-Current	Standard Kit to Suit all Applications-ABS Vehicles Only		W217602428		Rear	S/A	WR17606114	WR17606115
Ducato Euro Chassis X250	06-Current	Larger Springs(For Extra Comfort) ABS Vehicles Only		W217602429		Rear	S/A	WR17606114	WR17606115
Ducato Euro Chassis X250	06-Current	Driverite Comfort Improvement Kit		W217603202		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Scudo	96-06			W237604143	#	Rear	C/R	WR17606110	WR17606112
Scudo G9	07-Current			W237604264		Rear	C/R	WR17606110	WR17606112
Scudo G9	07-Current	Electronic Height Control-With Lowering (Not Suitable for SWB)		W217603496		Rear	F/A	Included	Included
Ulysse	02-Current	Electronic Height Control-With Lowering		W217603516		Rear	F/A	Included	Included
▶ Ford Cars, SUVs & Rangers									
Bronco	80-90	4x2, 4x4		W237604102		Front	C/R	WR17606110	WR17606112
Bronco (full size) *	90-96	4x4		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604102		Front	C/R		
Country Squire	83-97			W237604108		Rear	C/R	WR17606110	WR17606112
Crown Victoria	98-08	with rear coil springs		W237604107		Rear	C/R	WR17606110	WR17606112
Crown Victoria	83-97			W237604108		Rear	C/R	WR17606110	WR17606112
Edge	07-10			W237604171		Rear	C/R	WR17606110	WR17606112
Expedition	97-02	4x2, 4x4, with rear coil springs		W237604134		Rear	C/R	WR17606110	WR17606112
Excursion	00-06	4x2		W217602255		Rear	S/A	WR17606110	WR17606112
Excursion	00-06	4x4		W217602251		Rear	S/A	WR17606110	WR17606112
Explorer	11-Current			W237604189		Rear	C/R	WR17606110	WR17606112
Flex	09-Current			W237604177		Rear	C/R	WR17606110	WR17606112
Fusion	06-Current			W237604169		Rear	C/R	WR17606110	WR17606112
LTD	83-86			W237604103		Rear	C/R	WR17606110	WR17606112
Mustang	79-03			W237604103		Rear	C/R	WR17606110	WR17606112
Ranger	00-11	4x4-For Vehicles fitted with ABS		W217603454		Rear	S/A	WR17606110	WR17606112
Ranger	11-Current	4x2 Hi-Rider & 4x4 Rear		W217603042		Rear	S/A	WR17606110	WR17606112
Ranger (not SuperCab 4x4 with 6' bed)	10-11	4x2, 4x4		W217602531	+++	Rear	S/A	WR17606110	WR17606112
Ranger (not for use with composite leaf)	83-09	4x2, 4x4, not Super-Cab 4x4 with 6' bed,		W217602172	+++	Rear	S/A	WR17606110	WR17606112
Taurus (sw only)	86-98			W237604105		Rear	C/R	WR17606110	WR17606112
Taurus (sw only)	99-06			W237604141	#	Rear	C/R	WR17606110	WR17606112
Taurus	10-Current			W237604177		Rear	C/R	WR17606110	WR17606112
Thunderbird	92-97			W237604105		Rear	C/R	WR17606110	WR17606112
Thunderbird	89-91			W237604104		Rear	C/R	WR17606110	WR17606112
Thunderbird	80-88			W237604106		Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last

= IntelliRide Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Ford Commercials & Motorhomes & Vans								
E33 (with front coil springs)	86-91	Motorhome Class "A"		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E33 (with front coil springs)	92-96	Motorhome Class "A"		W217602061	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-100, E-150	75-91	may require tailpipe modification		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-150	75-07			W217602171	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-150	08-Current			W217602488	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-250	98-Current			W217602165	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-250	75-91	may require tailpipe modification		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-250 (cutaway)	07-08			W217602061	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350	75-91	may require tailpipe modification		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350	75-91	may require tailpipe modification		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350	75-91	Motorhome Class "C" Van, may require tailpipe modification		W217602032	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350 (with dual rear wheels)	92-08	8618 Work-Rite Kit for rear		W217602061	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350 (with dual rear wheels)	92-Current	Motorhome Class "C" Van		W217602061	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-350 (with single rear wheels)	98-Current			W217602181	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-450	96-07	Motorhome Class "C" Van		W217602377	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-450	08-Current	Motorhome Class "C" Van		W217602458	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
E-450 (requires 2" clearance above frame)	96-Current	Motorhome Class "C" Van		W217602153	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F53	90-98	Motorhome Class "A"		W217602068	Rear	S/A	WR17606110	WR17606112
				W217602070	Front	S/A		
F53 (16,000, 18,000 GVWR)	99-07	Motorhome Class "A", not Thor m/h		W217602170	Rear	S/A	WR17606110	WR17606112
				W217602070	Front	S/A		

Key Symbols: ‡ = while supplies last

= IntelliRide Kit

= Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
▶ Ford Commercials & Motorhomes & Vans (continued)								
F53 (24,000, 26,000 GVWR)	08-10	Motorhome Class "A", not Thor m/h		W217602474	+	Rear	S/A	WR17606110
				W217602476		Front	S/A	
F53 (16,000-22,000 GVWR)	08-Current	Motorhome Class "A", not Thor m/h		W217602170	+	Rear	S/A	WR17606110
				W217602475		Front	S/A	
F59	11-Current			W217602170	+	Rear	S/A	WR17606110
				W217602070		Front	S/A	
F-100	68-87	4x2, 4x4		W217602071	•	Rear	S/A	WR17606110
				W237604102		Front	C/R	
F-350	05-08	4x2, 4x4		W217602176	•	Rear	S/A	WR17606110
				W237604160		Front	C/R	
F-350	99-04	4x2		W217602176	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-350	99-04	4x4		W217602176	•	Rear	S/A	WR17606110
				W217602223		Front	S/A	
F-450	05-Current	4x2, 4x4		W217602176	•	Rear	S/A	WR17606110
				W237604160		Front	C/R	
F-450	99-04	4x2, 4x4		W217602176	•	Rear	S/A	WR17606110
				W217602189		Front	S/A	
F-550	05-Current	4x2, 4x4, requires 2" clearance above frame		W217602404	•••	Rear	S/A	WR17606110
				W237604160		Front	C/R	
F-550	99-04	4x2, 4x4, requires 2" clearance above frame		W217602404	•••	Rear	S/A	WR17606110
				W217602189		Front	S/A	
F-650	02-09			W217602363		Front	S/A	WR17606110
Freestar	04-07			W237604151		Rear	C/R	WR17606110
LCF-45, LCF-55	06-09	with side fuel tanks for rear kit, rear kit does not fit 115" wb		W217602437	‡	Rear	S/A	WR17606110
Transit 100/120	89-99	Square axle without Anti Roll Bar ϕ		W217602123	ϕ	Rear	S/A	WR17606110
Transit 130/160/190	89-99	Round axle without Anti Roll Bar ϕ		W217603001	ϕ	Rear	S/A	WR17606110
Transit	00-03	Square axle Single Rear Wheel- ABS Vehicles Only		W217603450		Rear	S/A	WR17606110
Transit	00-03	Round Axle Single Rear Wheel-ABS Vehicles Only		W217603451		Rear	S/A	WR17606110
Transit	04-Current	Square Rear Axle /Front wheel drive-Type 330-350 ABS vehicles only		W217603446		Rear	S/A	WR17606110
Transit	04-Current	Square Rear Axle /Front wheel drive-Type 260-300 ABS vehicles only		W217603449		Rear	S/A	WR17606110
Transit	04-Current	Round Axle /RWD /Dual Rear Wheel ABS Vehicles Only		W217603448		Rear	S/A	WR17606110
Transit FT350	04-Current	Round Axle /RWD /Single Rear Wheel ABS Vehicles Only		W217603447		Rear	S/A	WR17606110
Transit Connect	02-Current	Work-Rite Kit 8634 Kit		W217603444		Rear	S/A	WR17606110
Windstar	98-03			W237604106		Rear	C/R	WR17606110

Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Ford Pickup Trucks (without in bed hitch)								
F-100 *	68-79	4x2, 4x4		W217602071	•	Rear	S/A	WR17606110
				W237604102		Front	C/R	
F-150 (not Raptor or FX2)	04-Current	4x2, 4x4, 8606 Work-Rite Kit for rear kit		W217602525	+	Rear	S/A	WR17606110
F-150 (with B&W hitch only)	04-Current	4x2, 4x4, 8606 Work-Rite Kit for rear kit		W217602542	+	Rear	S/A	WR17606110
F-150 Heritage	97-04	4x2, 4x4		W217602320	++	Rear	S/A	WR17606110
F-150	68-96	4x2, 4x4		W217602071	•	Rear	S/A	WR17606110
				W237604102		Front	C/R	
F-250 Under 8500 GVWR ++	97-03	4x2, 4x4		W217602320		Rear	S/A	WR17606110
F-250 Under 8500 GVWR	69-96	4x2		W217602071	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-250 Under 8500 GVWR	69-96	4x4		W217602071	•	Rear	S/A	WR17606110
F-250 (4x2 only)	11-Current	8616 Work-Rite Kit for front		W237604101		Front	C/R	WR17606110
Gasoline (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602550		Rear	S/A	WR17606110
Diesel (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602535		Rear	S/A	WR17606110
F-250 (4x2 only)	08-10	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602452	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-250 (4x2 only)	05-07	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-250 Over 8500 GVWR (4x2 only)	99-04	8612 Work-Rite Kit for front		W217602484	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-250 Over 8500 GVWR (4x2 only)	84-98	8616 Work-Rite Kit for front		W217602071	•	Rear	S/A	WR17606110
				W237604101		Front	C/R	
F-250 Over 8500 GVWR (4x2 only)	69-83	8615 Work-Rite Kit for rear		W217602071	•	Rear	S/A	WR17606110
F-250 (4x4 only)	11-Current	8616 Work-Rite Kit for front		W237604160		Front	C/R	WR17606110
Gasoline (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602550		Rear	S/A	WR17606110
Diesel (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602535		Rear	S/A	WR17606110
F-250 (4x4 only)	08-10	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602452	•	Rear	S/A	WR17606110
				W237604160		Front	C/R	
F-250 (4x4 only)	05-07	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110
				W237604160		Front	C/R	
F-250 Over 8500 GVWR (4x4 only)	99-04	8612 Work-Rite Kit for front		W217602484	•	Rear	S/A	WR17606110
				W217602223		Front	S/A	
F-250 Over 8500 GVWR (4x4 only)	84-04			W217602071	•	Rear	S/A	WR17606110
				W217602223		Front	S/A	

Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" ● = 3" ●● = 9.5" + = 8" ++ = 6" +++ = 6.5"


= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/ - For kit approval details please contact Drive-Rite



Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
► Ford Pickup Trucks (without in bed hitch) (continued)									
F-250 Over 8500 GVWR (4x4 only)	69-83			W217602071	•	Rear	S/A	WR17606110	WR17606112
F-350 (4x2 only)	11-Current	8616 Work-Rite Kit for front		W237604101		Front	C/R	WR17606110	WR17606112
Gasoline (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602550		Rear	S/A	WR17606110	WR17606112
Diesel (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602535		Rear	S/A	WR17606110	WR17606112
F-350 (4x2 only)	08-10	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602452	•	Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-350 (4x2 only)	06-07	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-350 (4x2 only)	05	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x2 only)	99-04	8613 Work-Rite Kit for rear		W217602484	•	Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-350 (4x2 only)	70-98			W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-350 (4x2 only)	63-69			W217602071	•	Rear	S/A	WR17606110	WR17606112
F-350 (4x4 only)	11-Current	8616 Work-Rite Kit for front		W237604160		Front	C/R	WR17606110	WR17606112
Gasoline (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602550		Rear	S/A	WR17606110	WR17606112
Diesel (rear kits)	11-Current	8615 Work-Rite Kit for rear		W217602535		Rear	S/A	WR17606110	WR17606112
F-350 (4x4 only)	08-10	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602452	•	Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	06-07	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	05	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602071	•	Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	99-04	8613 Work-Rite Kit for rear		W217602484	•	Rear	S/A	WR17606110	WR17606112
				W217602223		Front	S/A		
F-350 (4x4 only)	84-98			W217602071	•	Rear	S/A	WR17606110	WR17606112
				W217602223		Front	S/A		
F-350 (4x4 only)	63-83			W217602071	•	Rear	S/A	WR17606110	WR17606112
F-450 (4x2 only)	08-10			W217602442		Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-450 (4x4 only)	08-10			W217602442		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: • = 7.5" •• = 3" ••• = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/   - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Ford Pickup Trucks (with in bed hitch)								
F-250 (Gasoline and 4x2 only)	11-Current			W237604101	Front	C/R	WR17606110	WR17606112
factory bed hitch	11-Current	8616 Work-Rite Kit for front		W217602520	Rear	S/A	WR17606110	WR17606112
aftermarket bed hitch	11-Current	8616 Work-Rite Kit for front		W217602450	Rear	S/A	WR17606110	WR17606112
F-250 (Diesel and 4x2 only)	11-Current	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602535	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-250 (4x2 only)	08-10	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602450	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-250 (4x2 only)	05-07	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602398	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-250 Over 8500 GVWR (4x2 only)	99-04	8612 Work-Rite Kit for rear		W217602330	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-250 Over 8500 GVWR (4x2 only) *	84-98			W217602071	• Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-250 Over 8500 GVWR (4x2 only) *	69-83			W217602071	• Rear	S/A	WR17606110	WR17606112
F-250 (Gasoline and 4x4 only)	11-Current	8616 Work-Rite Kit for front		W237604160	Front	C/R	WR17606110	WR17606112
factory bed	11-Current	8614 Work-Rite Kit for rear		W217602520	Rear	S/A	WR17606110	WR17606112
aftermarket bed	11-Current	8614 Work-Rite Kit for rear		W217602450	Rear	S/A	WR17606110	WR17606112
F-250 (Diesel and 4x4 only)	11-Current			W217602535	Rear	S/A	WR17606110	WR17606112
				W237604160	Front	C/R		
F-250 (4x4 only)	08-10	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602450	Rear	S/A	WR17606110	WR17606112
				W237604160	Front	C/R		
F-250 (4x4 only)	05-07	8616 Work-Rite kit for the front, 8614 Work-Rite Kit for the rear		W217602400	Rear	S/A	WR17606110	WR17606112
				W237604160	Front	C/R		
F-250 Over 8500 GVWR (4x4 only)	99-04	8612 Work-Rite Kit for front		W217602330	Rear	S/A	WR17606110	WR17606112
				W217602223	Front	S/A		
F-350 (Gasoline and 4x2 only)	11-Current	8616 Work-Rite Kit for front		W237604101	Front	C/R	WR17606110	WR17606112
factory bed	11-Current	8615 Work-Rite Kit for rear		W217602520	Rear	S/A	WR17606110	WR17606112
aftermarket bed	11-Current	8615 Work-Rite Kit for rear		W217602450	Rear	S/A	WR17606110	WR17606112
F-350 (Diesel and 4x2 only)	11-Current	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602535	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-350 (4x2 only)	08-10	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602450	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-350 (4x2 only)	06-07	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602398	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		
F-350 (4x2 only)	05	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602398	Rear	S/A	WR17606110	WR17606112
				W237604160	Front	C/R		
F-350 (4x2 only)	99-04	not V10 gas w/extended cab and 8' bed, 8613 Work-Rite Kit for rear		W217602330	Rear	S/A	WR17606110	WR17606112
				W237604101	Front	C/R		

Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"




























= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Ford Pickup Trucks (with in bed hitch) (continued)									
F-350 (4x2 only)	99-04	not V10 gas w/extended cab and 8' bed, 8613 Work-Rite Kit for rear		W217602330		Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-350 (Gasoline and 4x4 only)	11-Current	8616 Work-Rite Kit for front		W237604160		Front	C/R	WR17606110	WR17606112
factory bed	11-Current	8615 Work-Rite Kit for rear		W217602520		Rear	S/A	WR17606110	WR17606112
aftermarket bed	11-Current	8615 Work-Rite Kit for rear		W217602450		Rear	S/A	WR17606110	WR17606112
F-350 (Diesel and 4x4 only)	11-Current	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602535		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	08-10	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602450		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	06-07	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602400		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	05	8616 Work-Rite kit for the front, 8615 Work-Rite Kit for the rear		W217602400		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-350 (4x4 only)	99-04	8613 Work-Rite Kit for rear		W217602330		Rear	S/A	WR17606110	WR17606112
				W217602223		Front	S/A		
F-450	11-Current	4x2		W217602535		Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-450	08-10	4x2		W217602446		Rear	S/A	WR17606110	WR17606112
				W237604101		Front	C/R		
F-450	11-Current	4x4		W217602535		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
F-450	08-10	4x4		W217602446		Rear	S/A	WR17606110	WR17606112
				W237604160		Front	C/R		
▶ Freightliner / John Deere / Oshkosh									
"M" and "X" chassis (not XC21) (below 22,000 GVWR)	94-98	Motorhome Class "A"		W217602071	●	Rear	S/A	WR17606110	WR17606112
Sprinter 2500	02-06			W217602312	+++	Rear	S/A	WR17606110	WR17606112
Sprinter 3500 (cab & chassis)	02-06			W217602382		Rear	S/A	WR17606110	WR17606112
Sprinter 3500 (van and cab & chassis)	02-06			W217602425		Rear	S/A	WR17606110	WR17606112
▶ Honda									
CR-Z	11-Current			W237604183		Rear	C/R	WR17606110	WR17606112
Fit	10-Current			W237604183		Rear	C/R	WR17606110	WR17606112
Insight	10-Current			W237604183		Rear	C/R	WR17606110	WR17606112
Odyssey	05-10			W237604179		Rear	C/R	WR17606110	WR17606112
Odyssey	99-04			W237604138		Rear	C/R	WR17606110	WR17606112
Odyssey	96-98			W237604133	‡	Rear	C/R	WR17606110	WR17606112
Passport	98-02	4x2, 4x4		W237604136		Rear	C/R	WR17606110	WR17606112
Pilot	05-10			W237604179		Rear	C/R	WR17606110	WR17606112
Pilot	03-04			W237604138		Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last
 = Intelliride Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/ / - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
▶ Hummer									
H2, H2 SUT	03-09	with rear coil springs, <i>Work-Rite kit 8628 '03-06 Model.</i>		W237604108		Rear	C/R	WR17606110	WR17606112
▶ Hyundai									
Accent	07-11			W237604136		Rear	C/R	WR17606110	WR17606112
Entourage	07-09			W237604138		Rear	C/R	WR17606110	WR17606112
Santa Fe	07-Current			W237604170		Rear	C/R	WR17606110	WR17606112
Santa Fe	01-06			W237604167	‡	Rear	C/R	WR17606110	WR17606112
Veracruz	07-Current			W237604170		Rear	C/R	WR17606110	WR17606112
▶ Infiniti									
FX45	03-08	4x2, 4x4		W237604118		Rear	C/R	WR17606110	WR17606112
QX56	05-09			W237604150		Rear	C/R	WR17606110	WR17606112
▶ International									
Citystar CF 500, CF 600 (with side fuel tanks for rear kit)	06-09	Commercial Vehicle (vehicles without factory bed), rear kit does not fit 115" WB		W217602437	‡	Rear	S/A	WR17606110	WR17606112
▶ Isuzu									
290i, 370i	06-09	4x2, 4x4		W217602384		Rear	S/A	WR17606110	WR17606112
Amigo	98-00			W237604103		Rear	C/R	WR17606110	WR17606112
Axiom	02-03			W237604136		Rear	C/R	WR17606110	WR17606112
D-Max Rodeo	03-11	4x4 Leaf Spring Vehicle With ABS		W217603460		Rear	S/A	WR17606110	WR17606112
D-Max	12-Current	4x4		W217603475		Rear	S/A	WR17606110	WR17606112
NPR	96-Current	3.5 tonne max load		W217602449	+++	Rear	S/A	WR17606110	WR17606112
				W217602440	‡	Front	S/A		
NQR	96-Current	For Vehicles with ABS ϕ		W217603407	ϕ	Rear	S/A	WR17606110	WR17606112
Oasis	96-98			W237604133	‡	Rear	C/R	WR17606110	WR17606112
Rodeo, Rodeo Sport	98-04			W237604136		Rear	C/R	WR17606110	WR17606112
Trooper	98-02	4x4 Leaf Spring Vehicle With ABS		W217603460		Rear	S/A	WR17606110	WR17606112
Trooper	98-04			W237604143	‡	Rear	C/R	WR17606110	WR17606112
Trooper	92-97			W237604106		Rear	C/R	WR17606110	WR17606112
▶ Iveco									
Daily 29-35 S-L 11 to 18	08-Current	Single Rear Wheel (Leaf Above Axle)		W217603439		Rear	S/A	WR17606110	WR17606112
Daily 34-10, 35-12, 45-10, 45-12	90-99	Light Duty Application ϕ		W217602089	‡, ϕ	Rear	S/A	WR17606110	WR17606112
Daily 35-10 to 49-12	90-99	All Applications-Twin Rear Wheel (With ABS)-4 Bag System		W217603455		Rear	S/A	WR17606110	WR17606112
Daily 35C-11 to 35C-13	00-06	Twin Rear Wheel (With ABS)-4 Bag System		W217603456		Rear	S/A	WR17606110	WR17606112
Daily 35C to 50C	06-Current	Twin Rear Wheel (With ABS)		W217603410		Rear	S/A	WR17606110	WR17606112
Daily 35 S-L 11 to 17	00-06	Single Rear Wheel (Leaf Below Axle)		W217603438		Rear	S/A	WR17606110	WR17606112
Daily 40C-13	00-06	Twin Rear wheel (With ABS)-4 bag system		W217603456		Rear	S/A	WR17606110	WR17606112
Daily 50C-13	00-06	Twin Rear wheel (With ABS)-4 bag system		W217603456		Rear	S/A	WR17606110	WR17606112


Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
‡ = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/ / - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Jeep									
Commander	06-10	4x2, 4x4		W237604157		Rear	C/R	WR17606110	WR17606112
Grand Cherokee	11-Current	4x2, 4x4		W237604184		Rear	C/R	WR17606110	WR17606112
Grand Cherokee	05-10	4x2, 4x4		W237604157		Rear	C/R	WR17606110	WR17606112
Grand Cherokee	92-98	4x2, 4x4 (Not "up country")		W237604118		Rear	C/R	WR17606110	WR17606112
Grand Wagoneer	92-98	4x2, 4x4		W237604118		Rear	C/R	WR17606110	WR17606112
Liberty	08-Current	4x2, 4x4		W237604170		Rear	C/R	WR17606110	WR17606112
Liberty	02-07	4x2, 4x4		W237604146		Rear	C/R	WR17606110	WR17606112
Summit	92-93	SW Only		W237604105		Rear	C/R	WR17606110	WR17606112
Wrangler (except Rubicon)	07-Current	4x4 Only		W237604173		Rear	C/R	WR17606110	WR17606112
Wrangler Rubicon	07-Current	4x4 Only		W237604172		Rear	C/R	WR17606110	WR17606112
Wrangler Unlimited (except Rubicon)	07-Current	4x2, 4x4		W237604173		Rear	C/R	WR17606110	WR17606112
Wrangler Unlimited Rubicon	07-Current	4x4 Only		W237604172		Rear	C/R	WR17606110	WR17606112
Wrangler	97-06	4x2, 4x4		W237604157		Rear	C/R	WR17606110	WR17606112
▶ Kia									
Sedona	06-11			W237604138		Rear	C/R	WR17606110	WR17606112
Sorento BL	03-10	130mm Internal Diamter Rear Coil		W237604153		Rear	C/R	WR17606110	WR17606112
▶ Land Rover									
Defender 90	84-Current			W237604121		Rear	C/R	WR17606110	WR17606112
Defender 110, 130	83-Current	Requires inner coil (if installed) removal		W237604510		Rear	C/R	WR17606110	WR17606112
Discovery	90-04			W237604121		Rear	C/R	WR17606110	WR17606112
Range Rover	70-96			W237604121		Rear	C/R	WR17606110	WR17606112
Range Rover 93 MY, HSE 97MY	95-02	OEM-Original Landrover Suspension- Replacement Bags		OEM		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
				OEM		Front	F/A		
▶ Lexus									
LX 450	96-98			W237604124		Rear	C/R	WR17606110	WR17606112
LX 470	99-07			W237604124		Rear	C/R	WR17606110	WR17606112
▶ Lincoln									
Continental	82-88	with rear coil springs		W237604106		Rear	C/R	WR17606110	WR17606112
Mark IV	84-87	with rear coil springs		W237604106		Rear	C/R	WR17606110	WR17606112
Mark LT	09	4x2, 4x4		W217602525	+	Rear	S/A	WR17606110	WR17606112
Mark LT	05-08	4x2, 4x4		W217602350		Rear	S/A	WR17606110	WR17606112
MKS	09-Current			W237604178		Rear	C/R	WR17606110	WR17606112
MKT	09-11			W237604178		Rear	C/R	WR17606110	WR17606112
MKX	07-11			W237604171		Rear	C/R	WR17606110	WR17606112
MKZ	11-Current			W237604170		Rear	C/R	WR17606110	WR17606112
Towncar	80-89			W237604108		Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

Ⓛ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Mazda								
B2500/BT-50	00-11	4x4 For Vehicles Fitted with ABS		W217603454		Rear	S/A	WR17606110
BT-50 B32P 3.2L TD	11-Current	4x2 Hi-Rider & 4x4		W217603042		Rear	S/A	WR17606110
CX7	07-10			W237604167		Rear	C/R	WR17606110
Mazda 5	06-Current			W237604168		Rear	C/R	WR17606110
Mazda 6	06-Current	not sport wagon		W237604168		Rear	C/R	WR17606110
MPV	96-98			W237604105		Rear	C/R	WR17606110
Pickup	72-90	4x2		W217601130	●●	Rear	S/A	WR17606110
► Mercedes-Benz								
Citan	08-Current	Electronic Height Control-With Lowering	ⓘ	W217603167		Rear	F/A	Included
Sprinter 207-310	88-96	For All Applications		W217603004		Rear	S/A	WR17606110
Sprinter 308-316	96-06	Motorhome Applications		W217603114		Rear	S/A	WR17606110
Sprinter 308-316	96-06	All Applications		W217602312		Rear	S/A	WR17606110
Sprinter 209-324	06-Current	ABS Vehicles Only (Suitable for vehicles with rear overhang up to 1.5 Meters)		W217603500		Rear	S/A	WR17606110
Sprinter 309-324	06-Current	ABS Vehicles Only (All Applications including vehicles with rear overhang up		W217603502		Rear	S/A	WR17606110
Sprinter 408-416	96-06	Chassis Cab Version (Using 70mm Sleeve Airsprings)		W217603119		Rear	S/A	WR17606110
Sprinter 408-416	96-06	Chassis Cab Version (Using Double Convolute Airsprings)		W217602382		Rear	S/A	WR17606110
Sprinter 408-416	96-06	Van Version (Using 70mm Sleeve Airsprings)		W217603461		Rear	S/A	WR17606110
Sprinter 408-416	96-06	Van Version (Using Double Convolute Airsprings)		W217602425		Rear	S/A	WR17606110
Sprinter 416/419	07-Current	ABS Vehicles Only		W217603501		Rear	S/A	WR17606110
Sprinter 509-524	06-Current	ABS Vehicles Only		W217603501		Rear	S/A	WR17606110
Sprinter 509-524	06-Current	Kit with Larger Air Springs for Extra Volume and Comfort (ABS Vehicles Only)		W217604000		Rear	S/A	WR17606110
Viano, Vito	96-03	Front Wheel Drive Vehicle		W237604145		Rear	C/R	WR17606110
Viano, Vito	03-Current	Rear Axle Only c/w Shock Absorbers (No Controls)		W217603489		Rear	F/A	Contact Drive-Rite
Viano, Vito	03-Current	Rear Wheel Drive Applications		W237604261		Rear	C/R	WR17606110
► Mercury								
Capri	79-86			W237604103		Rear	C/R	WR17606110
Colony Park	83-97			W237604108		Rear	C/R	WR17606110
Cougar	92-97			W237604105		Rear	C/R	WR17606110
Cougar	89-91			W237604104		Rear	C/R	WR17606110
Cougar	80-88			W237604106		Rear	C/R	WR17606110
Grand Marquis	98-08			W237604107		Rear	C/R	WR17606110
Grand Marquis	83-97			W237604108		Rear	C/R	WR17606110
Marquis	83-86			W237604103		Rear	C/R	WR17606110
Milan	06-08			W237604168		Rear	C/R	WR17606110
Monterey	04-07			W237604151		Rear	C/R	WR17606110
Sable	99-06	Station wagon only		W237604141	‡	Rear	C/R	WR17606110
Sable	86-98	Station wagon only		W237604105		Rear	C/R	WR17606110

Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"











= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
 Mitsubishi									
Canter Fuso	05-Current	Front wheel drive		W217603019		Rear	S/A	WR17606110	WR17606112
Canter Fuso	05-Current	Rear Wheel Drive		W217603018		Rear	S/A	WR17606110	WR17606112
Expo	92-93	4x2, 4x4		W237604105		Rear	C/R	WR17606110	WR17606112
FE180	07-10	Commercial Vehicle (vehicles without factory bed)		W217602449		Rear	S/A	WR17606110	WR17606112
L200	90-05	4x4 For Vehicles Fitted With ABS		W217603457		Rear	S/A	WR17606110	WR17606112
L200/Triton Warrior	06-Current	4x4 For Vehicles Fitted with ABS		W217603469		Rear	S/A	WR17606110	WR17606112
Montero Sport	99-04			W237604137		Rear	C/R	WR17606110	WR17606112
Outlander	07-10			W237604182		Rear	C/R	WR17606110	WR17606112
Pajero/Shogun	04-Current			W237604247		Rear	C/R	WR17606110	WR17606112
Pickup	69-96	4x2		W217601130	●●	Rear	S/A	WR17606110	WR17606112
Raider Extended Cab	06-09	4x2, 4x4		W217602378	+++	Rear	S/A	WR17606110	WR17606112
Raider Double Cab	06-09	4x2, 4x4		W217602379	+++	Rear	S/A	WR17606110	WR17606112
 Nissan									
Altima	05-Current			W237604105		Rear	C/R	WR17606110	WR17606112
Armada	06-Current	4x2, 4x4		W237604150		Rear	C/R	WR17606110	WR17606112
Atleon LP2 35.15-35HD,15-56,15	06-Current			W217603406		Rear	S/A	WR17606110	WR17606112
Atleon LG1 70.14-80,14-80.19	06-Current	Manual Inflation Kit		W217603372		Rear	S/A	Contact Drive-Rite	Contact Drive-Rite
Atleon LG1 70.14-80,14-80.19	06-Current	Electronic Height Control-Automatic Height Control		W217603371		Rear	S/A	Automatic Controls	Automatic Controls
Cabstar	06-Current	3.5 Tonne		W217603127		Rear	S/A	WR17606110	WR17606112
Frontier	01-04	4x2		W217602293		Rear	S/A	WR17606110	WR17606112
Frontier	05-Current	4x2/4x4		W217602403		Rear	S/A	WR17606110	WR17606112
Interstar X70	98-09	Heavy Duty 		W217603123		Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Interstar X70	98-09	Complete Kit with Automatic Height Control 		W217603121		Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Interstar X70	98-09	Tapered Sleeve Comfort Kit 		W217603126		Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Interstar X70	98-09	Front Axle only (No Controls)		W217603382		Front	F/A	Contact Drive-Rite	Contact Drive-Rite
Interstar X70	98-09	Driverite Comfort Improvement Kit		W217603141		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
				W237604117		Front	C/R	WR17606113	WR17606112
Interstar X62	10-Current	ABS Vehicles Only (Rear Wheel Drive)		W217603117		Rear	S/A	WR17606120	WR17606121
Interstar X62	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603120		Rear	S/A	WR17606120	WR17606121
Interstar X62 *Outboard Kit*	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603118		Rear	S/A	WR17606120	WR17606121
Kubistar	08-Current	Electronic Height Control-With Lowering		W217603167		Rear	F/A	Included	Included
Maxima J31	05-08			W237604105		Rear	C/R	WR17606110	WR17606112
Murano Z51	09-Current	4x2, 4x4		W237604118		Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last

= Intelliride Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"



= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Nissan (continued)									
Murano Z50	03-08	4x2, 4x4		W237604181		Rear	C/R	WR17606110	WR17606112
Navara D21, D22	98-04	4x4, for vehicles fitted with ABS		W217603458		Rear	S/A	WR17606110	WR17606112
Navara D40	05-Current	4x4 For Vehicles Fitted with ABS		W217602413		Rear	S/A	WR17606110	WR17606112
NP300	08-Current	4x4 For Vehicles Fitted with ABS		W217603458		Rear	S/A	WR17606110	WR17606112
Pathfinder Armada	04-05	4x2, 4x4		W237604150		Rear	C/R	WR17606110	WR17606112
Pathfinder	87-95	4x2, 4x4		W237604106		Rear	C/R	WR17606110	WR17606112
Pathfinder	06-Current	4x2, 4x4		W237604166		Rear	C/R	WR17606110	WR17606112
Patrol Y60	88-97	4x2, Leaf Spring		W217601130	●●	Rear	S/A	WR17606110	WR17606112
Patrol Y60/Y61	88-Current	Coil Springs		W237604570		Rear	C/R	WR17606110	WR17606112
Pickup	69-96	4x2		W217601130	●●	Rear	S/A	WR17606110	WR17606112
Primastar X83	01-Current			W237604250		Rear	C/R	WR17606110	WR17606112
Primastar X83	01-Current	Rear Axle Only c/w Shock Absorbers (No Controls) ϕ		W217603465	ϕ	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Primastar X83	01-Current	Electronic Height Control-No Lowering ϕ		W217603244	ϕ	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Primastar X83	01-Current	Electronic Height Control-With Lowering ϕ		W217603166	ϕ	Rear	F/A	Included	Included
Quest	04-09			W237604118		Rear	C/R	WR17606110	WR17606112
Quest	12-Current			W237604188		Rear	C/R	WR17606110	WR17606112
Rogue	08-Current	4x2, 4x4		W237604181		Rear	C/R	WR17606110	WR17606112
Titan	04-10	4x2, 4x4		W217602355		Rear	S/A	WR17606110	WR17606112
Xterra	05-Current	4x2, 4x4		W217602409		Rear	S/A	WR17606110	WR17606112
▶ Oldsmobile									
88	85	Rear Wheel Drive vehicle		W237604116	#	Rear	C/R	WR17606110	WR17606112
98	65-84	Not for station wagon, Rear Wheel Drive vehicle		W237604116	#	Rear	C/R	WR17606110	WR17606112
Achieva	92-98			W237604104		Rear	C/R	WR17606110	WR17606112
Aurora	95-04			W237604105		Rear	C/R	WR17606110	WR17606112
Bravada	02-05	4x2, 4x4, with rear coil springs		W237604106		Rear	C/R	WR17606110	WR17606112
Calais, Cutlass, Cutlass Supreme	73-87	not for station wagon		W237604114		Rear	C/R	WR17606110	WR17606112
Custom Cruiser	77-93	station wagon only		W237604116	#	Rear	C/R	WR17606110	WR17606112
Cutlass Calais	85-91	Front Wheel Drive Vehicle		W237604104		Rear	C/R	WR17606110	WR17606112
Cutlass Cierra	82-96			W237604103		Rear	C/R	WR17606110	WR17606112
Cutlass Cruiser	84-95	Station wagon only, Front Wheel Drive Vehicle		W237604103		Rear	C/R	WR17606110	WR17606112
Delta 88	64-84	not for station wagon, Rear Wheel Drive vehicle		W237604116	#	Rear	C/R	WR17606110	WR17606112
Delta 88, 98	85-99	Front Wheel Drive Vehicle		W237604107		Rear	C/R	WR17606110	WR17606112
Firenza	82-88	Front Wheel Drive Vehicle		W237604104		Rear	C/R	WR17606110	WR17606112
LSS	96-01			W237604107		Rear	C/R	WR17606110	WR17606112
Silhouette	90-96			W237604110	#	Rear	C/R	WR17606110	WR17606112
Toronado	79-85			W237604106		Rear	C/R	WR17606110	WR17606112

Key Symbols: # = while supplies last

= Intelliride Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"










= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/ - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
 Opel									
Campo	88-02	4x4 Campo Fitted with ABS		W217603460		Rear	S/A	WR17606110	WR17606112
Combo	12-Current	Electronic Height Control-With Lowering Φ		W217603517	Φ	Rear	F/A	Included	Included
Movano X70	98-09	Heavy Duty Φ		W217603123	Φ	Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Movano X70	98-09	Complete Kit with Automatic Height Control Φ		W217603121	Φ	Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Movano X70	98-09	Tapered Sleeve Comfort Kit Φ		W217603126	Φ	Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Movano X70	98-09	Front Axle only (No Controls)		W217603382		Front	F/A	Contact Drive-Rite	Contact Drive-Rite
Movano X70	98-09	Driverite Comfort Improvement Kit		W217603141		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
				W237604117		Front	C/R	WR17606113	WR17606112
Movano X62	10-Current	ABS Vehicles Only (Rear Wheel Drive)		W217603117		Rear	S/A	WR17606120	WR17606121
Movano X62	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603120		Rear	S/A	WR17606120	WR17606121
Movano X62 *Outboard Kit*	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603118		Rear	S/A	WR17606120	WR17606121
Vivaro X83	01-Current			W237604250		Rear	C/R	WR17606110	WR17606112
Vivaro X83	01-Current	Rear Axle Only c/w Shock Absorbers (No Controls) Φ		W217603465		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Vivaro X83	01-Current	Electronic Height Control-No Lowering Φ		W217603244		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Vivaro X83	01-Current	Electronic Height Control-With Lowering Φ		W217603166	Φ	Rear	F/A	Included	Included
 Peugeot									
307	04-Current			W237604158		Rear	C/R	WR17606110	WR17606112
807	02-Current	Electronic Height Control-With Lowering		W217603516		Rear	F/A	Included	Included
Boxer - Euro Chassis 280/290	88-93	All Applications Φ		W217602112	Φ	Rear	S/A	WR17606110	WR17606112
Boxer - Euro Chassis X230/X244	94-06	All Applications Φ		W217602110	Φ	Rear	S/A	WR17606110	WR17606112
Boxer - Euro Chassis X250	06-Current	Standard Kit to Suit all Applications-ABS Vehicles Only		W217602428		Rear	S/A	WR17606114	WR17606115
Boxer - Euro Chassis X250	06-Current	Larger Springs(For Extra Comfort) ABS Vehicles Only		W217602429		Rear	S/A	WR17606114	WR17606115
Boxer - Euro Chassis X250	06-Current	Driverite Comfort Improvement Kit		W217603202		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Boxer - Euro Chassis X250	06-Current	Electronic Height Control-With Lowering		W217603337		Rear	F/A	Included	Included
Expert	96-06			W237604143	#	Rear	C/R	WR17606110	WR17606112
Expert G9	07-Current			W237604264		Rear	C/R	WR17606110	WR17606112
Expert G9	07-Current	Electronic Height Control-With Lowering (Not Suitable for SWB)		W217603496		Rear	F/A	Included	Included
J5-Euro Chassis 280/290	88-93	All Applications Φ		W217602112	Φ	Rear	S/A	WR17606110	WR17606112
Partner	08-Current	Electronic Height Control-With Lowering (Not Automatic)		W217603168		Rear	F/A	Included	Included

Key Symbols: ‡ = while supplies last

= IntelliRide Kit

Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
► Plymouth									
Acclaim	89-95			W237604105		Rear	C/R	WR17606110	WR17606112
Arrow	80-93			W217601130	●●	Rear	S/A	WR17606110	WR17606112
Caravelle	85-88			W237604105		Rear	C/R	WR17606110	WR17606112
Reliant	81-94			W237604105		Rear	C/R	WR17606110	WR17606112
Sundance	87-93			W237604105		Rear	C/R	WR17606110	WR17606112
► Pontiac									
6000	82-91			W237604103		Rear	C/R	WR17606110	WR17606112
Bonneville	87-99			W237604107		Rear	C/R	WR17606110	WR17606112
Bonneville	00-05			W237604105		Rear	C/R	WR17606110	WR17606112
Firebird, Trans Am	82-02			W237604103		Rear	C/R	WR17606110	WR17606112
Grand Am, Le Mans, Grand Le Mans	73-82			W237604114		Rear	C/R	WR17606110	WR17606112
Grand Am	85-97			W237604104		Rear	C/R	WR17606110	WR17606112
Grand Prix	73-87			W237604114		Rear	C/R	WR17606110	WR17606112
Grand Prix	65-68			W237604114		Rear	C/R	WR17606110	WR17606112
Grandville	71-73			W237604116	‡	Rear	C/R	WR17606110	WR17606112
J-2000, Sunbird	82-94			W237604104		Rear	C/R	WR17606110	WR17606112
Le Mans	88-92			W237604104		Rear	C/R	WR17606110	WR17606112
Phoenix	80-84			W237604103		Rear	C/R	WR17606110	WR17606112
Safari (sw only)	87-89			W237604116	‡	Rear	C/R	WR17606110	WR17606112
Transport APV	90-96			W237604110	‡	Rear	C/R	WR17606110	WR17606112
Torrent	05-07	4x2, 4x4		W237604167	‡	Rear	C/R	WR17606110	WR17606112
► Renault									
Espace	00-02			W237604251		Rear	C/R	WR17606110	WR17606112
Espace	03-Current			W237604250		Rear	C/R	WR17606110	WR17606112
Espace	03-Current	Rear Axle Only c/w Shock Absorbers (No Controls)		W217603172		Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Kangoo X61	08-Current	Electronic Height Control-With Lowering		W217603167		Rear	F/A	Included	Included
Laguna II	02-03			W237604106		Rear	C/R	WR17606110	WR17606112
Mascott	05-Current			W217603125		Rear	S/A	WR17606110	WR17606112
Master X70	98-09	Heavy Duty ϕ		W217603123	ϕ	Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		
Master X70	98-09	Complete Kit with Automatic Height Control ϕ		W217603121	ϕ	Rear	S/A	WR17606113	WR17606112
				W237604117		Front	C/R		

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/ - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Renault (continued)								
Master X70	98-09	Tapered Sleeve Comfort Kit ϕ		W217603126	ϕ	Rear	S/A	WR17606113
				W237604117		Front	C/R	
Master X70	98-09	Front Axle only (No Controls)		W217603382		Front	F/A	Contact Drive-Rite
Master X70	98-09	Driverite Comfort Improvement Kit		W217603141		Rear	F/A	Contact Drive-Rite
				W237604117		Front	C/R	WR17606113
Master X62	10-Current	ABS Vehicles Only (Rear Wheel Drive)		W217603117		Rear	S/A	WR17606120
Master X62	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603120		Rear	S/A	WR17606120
Master X62 *Outboard Kit*	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603118		Rear	S/A	WR17606120
Maxity	07-Current	3.5 Tonne		W217603127		Rear	S/A	WR17606110
Trafic X83	01-Current			W237604250		Rear	C/R	WR17606110
Trafic X83	01-Current	Rear Axle Only c/w shock absorbers (No Controls) ϕ		W217603465	ϕ	Rear	F/A	Contact Drive-Rite
Trafic X83	01-Current	Electronic Height Control-No Lowering ϕ		W217603244	ϕ	Rear	F/A	Contact Drive-Rite
Trafic X83	01-Current	Electronic Height Control-With Lowering ϕ		W217603166	ϕ	Rear	F/A	Included
► Saturn								
Relay	05-07			W237604155		Rear	C/R	WR17606110
Vue	02-07			W237604167	+	Rear	C/R	WR17606110
► Scion								
xA	04-07			W237604136		Rear	C/R	WR17606110
xB (Toyota Rukus)	08-Current			W237604136		Rear	C/R	WR17606110
xD	08-Current			W237604156		Rear	C/R	WR17606110
► Ssangyong								
Musso Sport	04-06			W237604240		Rear	C/R	WR17606110
Musso Wagon	92-06			W237604241		Rear	C/R	WR17606110
Rexton/Actyon	02-Current			W237604103		Rear	C/R	WR17606110
► Sterling								
Bullet (cab & chassis)	08-09	4x2, 4x4		W217602478	+	Rear	S/A	WR17606110
► Suzuki								
Jimny	98-11			W237604516		Rear	C/R	WR17606110
				W237604515		Front	C/R	
Sidekick	89-93			W237604620		Rear	C/R	WR17606110
Vitara	10-Current			W237604182		Rear	C/R	WR17606110
Grand Vitara	90-00			W237604620		Rear	C/R	WR17606110
Grand Vitara	10			W237604182		Rear	C/R	WR17606110
SX4 (crossover, sedan, sport)	10			W237604183		Rear	C/R	WR17606110

Key Symbols: ‡ = while supplies last

= IntelliRide Kit

ϕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite



Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls	
▶ Toyota									
4 Runner	90-95			W237604112		Rear	C/R	WR17606110	WR17606112
4 Runner	96-97			W237604123		Rear	C/R	WR17606110	WR17606112
4 Runner	98-Current			W237604135		Rear	C/R	WR17606110	WR17606112
Dyna 150	02-Current	Dual Rear Wheel Only		W217603128		Rear	S/A	WR17606110	WR17606112
Echo	01-05			W237604118		Rear	C/R	WR17606110	WR17606112
FJ Cruiser	98-Current			W237604135		Rear	C/R	WR17606110	WR17606112
Hiace	99-02			W237604500		Rear	C/R	WR17606110	WR17606112
Hiace	03-Current			W237604138		Rear	C/R	WR17606110	WR17606112
Hiace	05-11	KDH / TRH200 (Leafsprung)		W217603504		Rear	S/A	WR17606110	WR17606112
Hilux	88-05	4x4, N16/N17 For Vehicles Fitted with ABS		W217603459		Rear	S/A	WR17606110	WR17606112
Hilux/Vigo	06-Current	4x4 Φ		W217603475	Φ	Rear	S/A	WR17606110	WR17606112
Hilux Surf (4 Runner)	90-95			W237604112		Rear	C/R	WR17606110	WR17606112
Hilux Surf (4 Runner)	96-97			W237604123		Rear	C/R	WR17606110	WR17606112
Hilux Surf (4 Runner)	98-10			W237604135		Rear	C/R	WR17606110	WR17606112
Land Cruiser	88-96	Leaf Spring Vehicle - Bj75 Pick up		W217601130		Rear	S/A	WR17606110	WR17606112
Land Cruiser	91-07	European Model		W237604124		Rear	C/R	WR17606110	WR17606112
Land Cruiser	08-Current			W237604164		Rear	C/R	WR17606110	WR17606112
Land Cruiser 100 Series	98-07			W237604114		Rear	C/R	WR17606110	WR17606112
Land Cruiser 200 Series	07-Current			W237604129		Rear	C/R	WR17606110	WR17606112
Pickup	69-95	4x2		W217601130	●●	Rear	S/A	WR17606110	WR17606112
Pickup	84-95	4x4		W217602116	‡	Rear	S/A	WR17606110	WR17606112
Prius	10-Current			W237604136		Rear	C/R	WR17606110	WR17606112
RAV4	96-98	4x2, 4x4		W237604104		Rear	C/R	WR17606110	WR17606112
RAV4	07-Current	4x2, 4x4		W237604174		Rear	C/R	WR17606110	WR17606112
Sequoia	08-Current	with rear coil springs		W237604164		Rear	C/R	WR17606110	WR17606112
Sequoia	01-07			W237604124		Rear	C/R	WR17606110	WR17606112
Siena	04-Current	Not AWD		W237604155		Rear	C/R	WR17606110	WR17606112
Siena	98-03			W237604118		Rear	C/R	WR17606110	WR17606112
T100	93-98	4x2		W217602115		Rear	S/A	WR17606110	WR17606112
T100	93-98	4x4		W217602116	‡	Rear	S/A	WR17606110	WR17606112
Tacoma	95-04	4x2		W217602213		Rear	S/A	WR17606110	WR17606112
Tacoma	05-Current	4x2		W217602410		Rear	S/A	WR17606110	WR17606112
Tacoma	95-04	4x4		W217602304	#	Rear	S/A	WR17606110	WR17606112
Tacoma Prerunner	05-Current	4x2 only		W217602407		Rear	S/A	WR17606110	WR17606112
Tacoma Prerunner	95-04	4x2 only		W217602304	#	Rear	S/A	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last
 = Intelliride Kit
 Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/  /  - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Toyota (continued)								
Tacoma	05-11	4x4 only		W217602407	Rear	S/A	WR17606110	WR17606112
Tundra	00-06	4x2 only		W217602212	Rear	S/A	WR17606110	WR17606112
Tundra	00-06	4x4 only		W217602245	Rear	S/A	WR17606110	WR17606112
Tundra TRD	00-06	4x2 only		W217602245	Rear	S/A	WR17606110	WR17606112
Tundra	07-Current	4x2, 4x4		W217602445	Rear	S/A	WR17606110	WR17606112
Van (with Rear Coils)	64-89			W237604112	Rear	C/R	WR17606110	WR17606112
Yaris	07-10			W237604136	Rear	C/R	WR17606110	WR17606112
► Vauxhall								
Combo	12-Current	Electronic Height Control-With Lowering		W217603517	Rear	F/A	Included	Included
Movano X70	98-09	Heavy Duty Φ		W217603123	Rear	S/A	WR17606113	WR17606112
				W237604117	Front	C/R		
Movano X70	98-09	Complete Kit with Automatic Height Control Φ		W217603121	Rear	S/A	WR17606113	WR17606112
				W237604117	Front	C/R		
Movano X70	98-09	Tapered Sleeve Comfort Kit Φ		W217603126	Rear	S/A	WR17606113	WR17606112
				W237604117	Front	C/R		
Movano X70	98-09	Front Axle only (No Controls)		W217603382	Front	F/A	Contact Drive-Rite	Contact Drive-Rite
Movano X70	98-09	Driverite Comfort Improvement Kit		W217603141	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
				W237604117	Front	C/R	WR17606113	WR17606112
Movano X62	10-Current	ABS Vehicles Only (Rear Wheel Drive/Single Rear Wheel)		W217603117	Rear	S/A	WR17606120	WR17606121
Movano X62	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603120	Rear	S/A	WR17606120	WR17606121
Movano X62 *Outboard Kit*	10-Current	ABS Vehicles Only (Front Wheel Drive/Single Rear Wheel)		W217603118	Rear	S/A	WR17606120	WR17606121
Vivaro X 83	01-Current			W237604250	Rear	C/R	WR17606110	WR17606112
Vivaro X 83	01-Current	Rear Axle Only c/w Shock Absorbers (No Controls) Φ		W217603465	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Vivaro X 83	01-Current	Electronic Height Control-No Lowering Φ		W217603244	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
Vivaro X 83	01-Current	Electronic Height Control-With Lowering Φ		W217603166	Rear	F/A	Included	Included
► Volkswagen								
Amarok	10-Current			W217603129	Rear	S/A	WR17606110	WR17606112
Caddy	05-Current	ABS Vehicles Only		W217603503	Rear	S/A	WR17606110	WR17606112
CC	09-Current			W237604176	Rear	C/R	WR17606110	WR17606112
Crafter 28-35 (ABS Vehicles Only)	06-Current	Suitable for vehicles with rear overhang up to 1.5m		W217603500	Rear	S/A	WR17606110	WR17606112
Crafter 28-35 (ABS Vehicles Only)	06-Current	All Applications, vehicles with rear overhang up to 2.015m		W217603502	Rear	S/A	WR17606110	WR17606112
Crafter 50 (ABS Vehicles Only)	06-Current	Kit with Larger Air Springs for Extra Volume and Comfort		W217604000	Rear	S/A	WR17606110	WR17606112
Crafter 50	06-Current	ABS Vehicles Only		W217603501	Rear	S/A	WR17606110	WR17606112
Eos	07-Current			W237604176	Rear	C/R	WR17606110	WR17606112
GTI	07-Current			W237604176	Rear	C/R	WR17606110	WR17606112

Key Symbols: ‡ = while supplies last

= IntelliRide Kit

Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**

OEM/ - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air



Model	Year	Notes		Suspension Kit	Axle	Type	Single Controls	Dual Controls
► Volkswagen (continued)								
Golf TDI	07-Current			W237604176	Rear	C/R	WR17606110	WR17606112
Jetta (not TDI)	07-Current			W237604175	Rear	C/R	WR17606110	WR17606112
Jetta Sport Wagon, Golf Sport Wagon	09-Current			W237604176	Rear	C/R	WR17606110	WR17606112
3 Series LT	96-06	Chassis Cab/Motorhome Application		W217603114	Rear	S/A	WR17606110	WR17606112
3 Series LT	96-06	All Applications		W217602312	Rear	S/A	WR17606110	WR17606112
4 Series LT	96-06	Chassis Cab Version (Using 70mm Sleeve Airsprings)		W217603119	Rear	S/A	WR17606110	WR17606112
4 Series LT	96-06	Chassis Cab Version (Using Double Convolute Airsprings)		W217602382	Rear	S/A	WR17606110	WR17606112
4 Series LT	96-06	Van Version Using Double Convolute Airsprings		W217602425	Rear	S/A	WR17606110	WR17606112
4 Series LT	96-06	Van Version Using 70mm Sleeve Airsprings		W217603461	Rear	S/A	WR17606110	WR17606112
Passat (not TDI)	98-06			W237604104	Rear	C/R	WR17606110	WR17606112
Passat (not TDI)	12-Current			W237604176	Rear	C/R	WR17606110	WR17606112
Passat Wagon	07-09			W237604175	Rear	C/R	WR17606110	WR17606112
Routan	09-Current			W237604169	Rear	C/R	WR17606110	WR17606112
Taro 4x4	88-04	N16/N17- For Vehicles fitted with ABS Only		W217603459	Rear	S/A	WR17606110	WR17606112
Tiguan	09-Current			W237604176	Rear	C/R	WR17606110	WR17606112
T3 & T4, Transporter, Caravelle, Euro Van	85-03			W237604117	Rear	C/R	WR17606110	WR17606112
T4, Transporter, Caravelle, Euro Van	85-03	Rear Axle Kit Only (No Controls)		W217603022	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
T5 Van/Bus	04-Current	Rear Axle Only (No Controls)		W217603482	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
T5 Van/Bus	04-Current	Rear Axle Kit Only -c/w Shock Absorbers (No Controls)		W217603498	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
T5 Van/Bus	04-Current	Electronic Height Control-With Lowering		W217603483	Rear	F/A	Included	Included
T5 Van/Bus	04-Current	Electronic Height Control-Automatic Height Control		W217603414	Rear	F/A	Automatic Controls	Automatic Controls
T5 Van/Bus	04-Current	2.8 Tonne Vehicle-1540 kg front axle load-4 Corner-Electronic Height Control-With Lowering		W217603525	Rear	F/A	Included	Included
				W217603525	Front	F/A		
T5 Van/Bus	04-Current	3.2 Tonne Vehicle-1710 kg front axle load-4 Corner-Electronic Height Control-With Lowering		W217603526	Rear	F/A	Included	Included
				W217603526	Front	F/A		
T5 Chassis Cab	04-Current	Rear Axle Only (No Controls)		W217603481	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
T5 Chassis Cab	04-Current	Rear Axle Kit Only -c/w Shock Absorbers (No Controls)		W217603499	Rear	F/A	Contact Drive-Rite	Contact Drive-Rite
T5 Chassis Cab	04-Current	Electronic Height Control-With Lowering		W217603484	Rear	F/A	Included	Included
T5 Chassis Cab	04-Current	Electronic Height Control-Automatic Height Control		W217603415	Rear	F/A	Automatic Controls	Automatic Controls
T5 Chassis Cab	04-Current	2.8 Tonne Vehicle-1540 kg front axle load-4 Corner-Electronic Height Control-With Lowering		W217603527	Rear	F/A	Included	Included
				W217603527	Front	F/A		
T5 Chassis Cab	04-Current	3.2 Tonne Vehicle-1710 kg front axle load-4 Corner-Electronic Height Control-With Lowering		W217603528	Rear	F/A	Included	Included
				W217603528	Front	F/A		

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/ - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™ S/A = Semi-Air
L/R = Level-Rite™ F/A = Full Air



Model	Year	Notes		Suspension Kit		Axle	Type	Single Controls	Dual Controls
▶ Volvo									
140,160	66-74			W237604101		Rear	C/R	WR17606110	WR17606112
240,260	75-85			W237604106		Rear	C/R	WR17606110	WR17606112
850	90-01			W237604105		Rear	C/R	WR17606110	WR17606112
▶ Workhorse									
P30, P32	00-08	10,500 to 17,000 GVWR, Motorhome Class "A"		W217602147	●	Rear	S/A	WR17606110	WR17606112
P30, P32, W16	00-07	10,500 to 17,000 GVWR, Motorhome Class "A"		W217602085		Rear	S/A	WR17606110	WR17606112
W20, W22, W24	04-09	Motorhome Class "A"		W217602347		Rear	S/A	WR17606110	WR17606112
				W217602284		Front	S/A		
UFO	07-09	Motorhome Class "A"		W217602457		Rear	S/A	WR17606110	WR17606112
				W217602477		Front	S/A		

DRIVE-RITE

AIR SUSPENSION SYSTEMS

Control Kits: Compressor and Gauge systems to work with your kit

Universal Control Systems

Control kits come with a compressor and a gauge to help adjust the pressure in the air springs. These control kits are designed to work with any of our Coil-Rite and Semi-Air kits.

WR17606110 - Drive-Rite Light Duty Compressor and Single Gauge Kit

This kit comes with a Light Duty compressor, a Drive-Rite undermounted Single analogue gauge and a low pressure sensor.



WR17602236 - Firestone Standard Duty Compressor and Single Gauge kit.

This kit comes with a Standard Duty compressor and a Single analogue gauge with a padel switch



WR17606116 - Drive-Rite Standard Duty Compressor and Single Gauge kit

This kit comes with a Standard Duty compressor, a Drive-Rite Single analogue gauge, a mounting stand and a low pressure sensor.



WR17606112 - Drive-Rite Light Duty Compressor and Dual Gauge kit

This kit comes with a Light Duty compressor, a Drive-Rite undermounted Dual analogue gauge and low pressure sensors.



WR17602436 - Firestone Dual Electric Air Command Kit

This kit comes with a Standard Duty compressor and a Dual analogue gauge with Padel switches



WR17606117 - Drive-Rite Standard Duty Compressor and Dual Gauge kit

This kit comes with a Standard Duty compressor, a Drive-Rite Dual analogue gauge, a mounting stand and low pressure sensors.



Key Symbols: ‡ = while supplies last
ⓘ = Intelliride Kit
Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Control Kits: Compressor and Gauge systems to work with your kit

These control kits are designed to work with a specific vehicle model.

All of the kits mentioned below, except for the Manual Inflation kits, come with a compressor, low pressure sensors and a specifically designed gauge panel.

Dedicated Control Systems


WR17606114 - X250 Integrated Bracket. Single Gauge kit

This Single gauge kit is designed to integrate into the dashboard of the X250 vehicles, including Fiat Ducato, Citroën Jumper/Relay and the Peugeot Boxer. Model 2006-Current.



WR17606115- X250 Integrated Bracket. Dual Gauge kit

This Single gauge kit is designed to integrate into the dashboard of the X250 vehicles, including Fiat Ducato, Citroën Jumper/Relay and the Peugeot Boxer. Model 2006-Current.

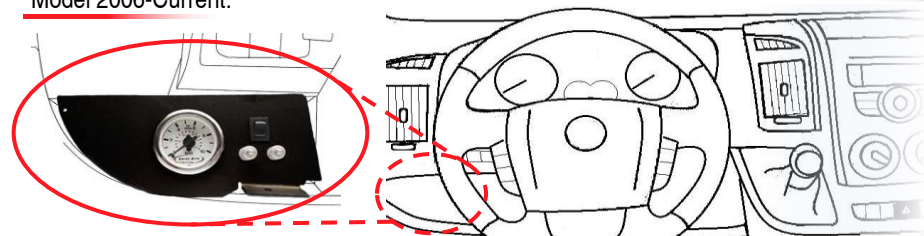

WR17606113- X70 Undermounted Bracket. Single Gauge kit

This kit is designed to mount under the dashboard of the X70 vehicles, including Renault Master, Nissan Interstar and the Opel/Vauxhall Monavo. Model 1998-2009



WR17606120 - X62 Integrated Bracket. Single Gauge kit

This Single gauge kit is designed to integrate into the dashboard of the X62 vehicles, including Renault Master, Nissan Interstar and the Opel/Vauxhall Monavo. Model 2010-Current.



WR17606121 - X62 Integrated Bracket. Dual Gauge kit

This Dual kit is designed to integrate into the dashboard of the X62 vehicles, including Renault Master, Nissan Interstar and the Opel/Vauxhall Monavo. Model 2010-Current.



Key Symbols: ‡ = while supplies last

ⓘ = Intelliride Kit

Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"

= Use spacer kit 2366 with heavy duty package. Do NOT exceed the vehicles recommended GVWR

OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

IntelliRide Kits



IntelliRide Systems

IntelliRide is a fully automatic, **Electronically Controlled Air Suspension (ECAS) System**. When fitted the system provides comfort while maintaining a programmed ride height irrespective of the load. Multiple vehicle heights are available at the push of a button.

The IntelliRide system continuously monitors inputs and component performance as a means of increasing safety and durability.

The system recognizes and responds accordingly to potholes, cross-articulation and extended turns. This intelligence prevents unnecessary activity and air consumption. The system even recognizes unachievable heights, assisting in the prevention of possible damage above or below the vehicle.

Our IntelliRide Systems are incorporated into many of our Full Air applications. We also have a range of generic kits that can be adapted to all vehicles.



DR.11.010102- Generic 2 Corner IntelliRide Kit without a Tank

This kit comprises of an ECU, 2 Corner Harness, Height Sensors, Light Duty Valve Block, an AMK Compressor with integrated dryer and a 2 Corner IntelliRide Handheld.



DR.11.010202- Generic 2 Corner IntelliRide Kit with a Tank

This kit comprises of an ECU, 2 Corner Harness, Height Sensors, Heavy Duty Valve Block, an AMK Compressor with integrated dryer, a 3 Gallon Tank and a 2 Corner IntelliRide Handheld.



DR.11.010304- Generic 4 Corner IntelliRide Kit with Tank

This kit comprises of an ECU, 4 Corner Harness, Height Sensors, Heavy Duty Valve Block, an AMK Compressor with integrated dryer, a 3 Gallon Tank and a 4 Corner IntelliRide Handheld.

**Horizon Levelling Sensor sold separately. Contact Drive-Rite for details.*



Key Symbols: ‡ = while supplies last
ⓘ = IntelliRide Kit
⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Air Springs

Air Springs

There are many types of Air Springs available, the most common are: Single Convolute, Double Convolute, Tapered Sleeve and Reversible Sleeve. See below for a list of Air Springs used in our kits.

Contact Drive-Rite for information on our full range of Air Springs.

Types of Air Springs:



Single Convolute



Tapered Sleeve



Double Convolute



Reversible Sleeve

**For information on Compressed & Extended Heights, Ride Heights and Max Diameter, please contact Drive-Rite or visit our website.




Single Convolute

Max: 7 Bar (100 psi), Min: 2/3 Bar (10 psi)




Style: 116B-1

Part #: 1132

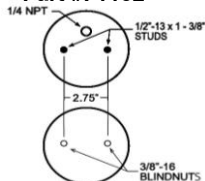


Style: 160BY

Part #: 6868

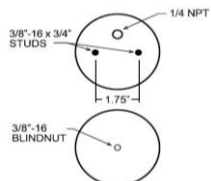



Style: 160BY

Part #: 6869

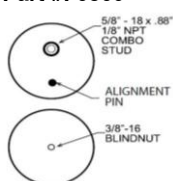

Tapered Sleeve

Max Pressure: 7 Bar (100 psi)
Min Pressure: 2/3 Bar (10 psi)

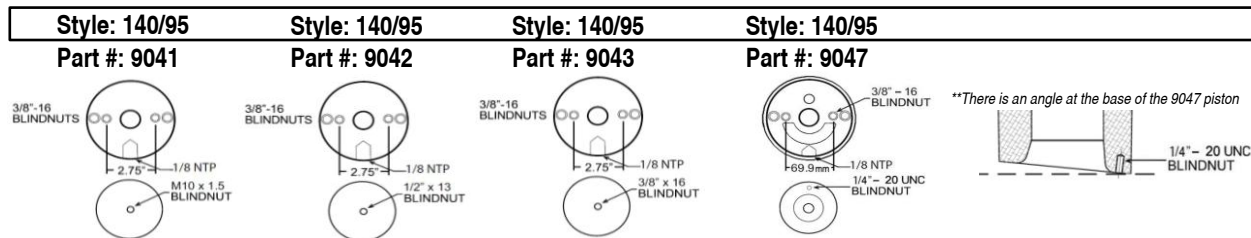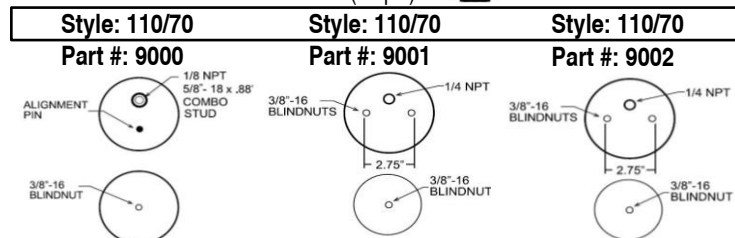


**There is an angle at the base of the 9047 piston



Reversible Sleeve

Max Pressure: 7 Bar (100 psi)
Min Pressure: 2/3 Bar (10 psi)

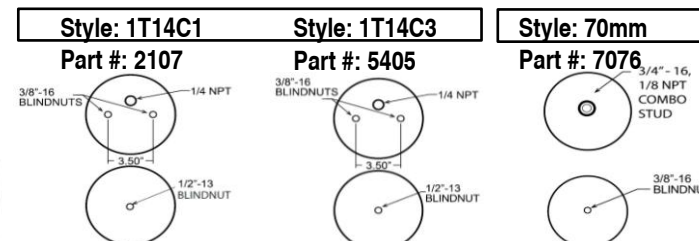

Key Symbols: ‡ = while supplies last
ⓘ = Intelliride Kit
⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. Do NOT exceed the vehicles recommended GVWR
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Air Springs






Air Springs

There are many types of Air Springs available, the most common are: Single Convolute, Double Convolute, Tapered Sleeve and Reversible Sleeve. Each type has many styles to suit all applications.



Double Convolute

Max Pressure: 7 Bar (100 psi)
Min Pressure: 2/3 Bar (10 psi)

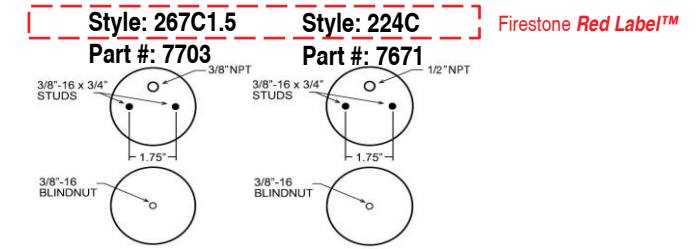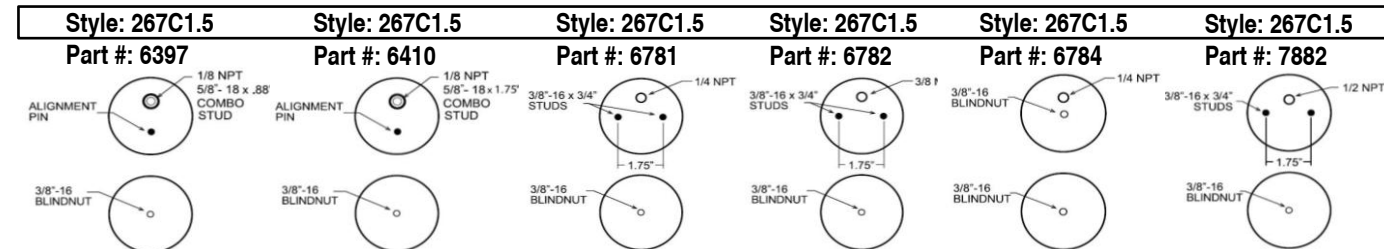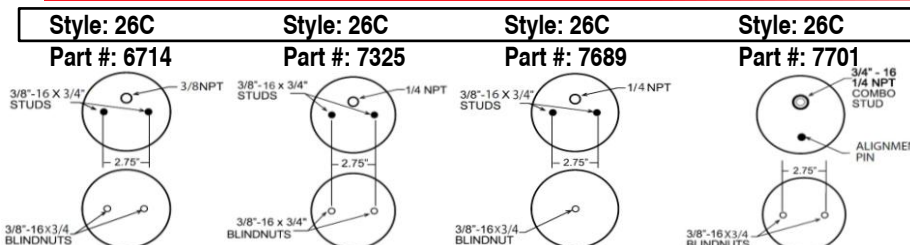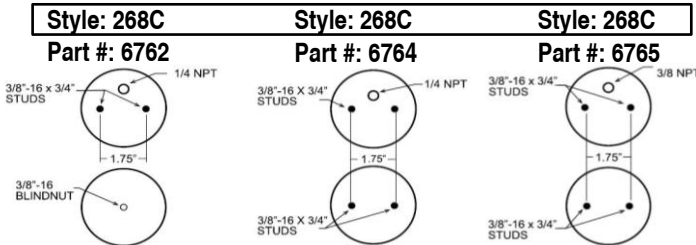

Firestone Red Label™
High Pressure Air Springs -
Up to 10 Bar (150 psi) for custom applications

Key Symbols: ‡ = while supplies last
ⓘ = Intelliride Kit
⊕ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/UTAC/TUV - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™ S/A = Semi-Air
L/R = Level-Rite™ F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

DRIVE RITE
AIR SUSPENSION SYSTEMS

Compressors

Compressors

There is a wide range of air Compressors available with Drive-Rite. All levels of air suspension can be catered for.



AMK



1260



9164



9284



Air Compressors	Part No.	Max. Air Pressure	Duty Cycle	Max. AMP Draw	0 - 30 PSI (0-2 Bar)*	0-60 PSI (0-4.1 Bar)*	Tank
Light Duty	9377	8.3 Bar (120 psi)	9%	10 AMPS	17 sec	42 sec	<i>Not for use with air tanks</i>
Light Duty	1260	6.9 Bar (100 psi)	15%	11 AMPS	-	-	<i>Not for use with air tanks</i>
Standard Duty	9284	9 Bar (130 psi)	15%	20 AMPS	13 sec	30 sec	Use with up to 1 gallon tank
Heavy Duty	9285	10.4 Bar (150 psi)	30%	18 AMPS	10 sec	24 sec	Use with up to 3 gallon tank
Heavy Duty -alt	9335	10 Bar (145 psi)	30%	17 AMPS	10 sec	24 sec	Use with up to 5 gallon tank
Xtreme	9287	10.4 Bar (150 psi)	100%	23 AMPS	7 sec	18 sec	Use with up to 6 gallon tank
Xtreme -alt	9164	6.9 Bar (100 psi)	100%	28 AMPS	-	-	Use with up to 6 gallon tank

*Indicates flow rate - how long it takes to fill 1/2 gallon air tank.

AMK - 12 Bar Range	Part No.	Max. Air Pressure	Duty Cycle	Max. AMP Draw	0-10 Bar in 1ltr Tank	0-10 Bar in 1 Gallon Tank	Tank
12V Compressor LFK 12 with Dryer	1201	12 Bar (170 psi)	20%	27 AMPS	25 sec	92 sec	Use with up to 5 gallon tank
12V Compressor LFK 12 without Dryer	1220	13 Bar (188 psi)	20%	27 AMPS	25 sec	92 sec	Use with up to 5 gallon tank

AMK - 21 Bar Range	Part No.	Max. Air Pressure	Duty Cycle	Max. AMP Draw	0-17 Bar in 1ltr Tank	0-17 Bar in 1 Gallon Tank	Tank
12V Compressor LFK 21 with Dryer	1221	21 Bar (300 psi)	25%	35 AMPS	40 sec	135 sec	Use with up to 8 gallon tank
12V Compressor LFK 21 without Dryer	1222	21 Bar (300 psi)	25%	35 AMPS	40 sec	135 sec	Use with up to 8 gallon tank

Key Symbols: ‡ = while supplies last
 = IntelliRide Kit
 = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
 # = Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
 OEM/   - For kit approval details please contact Drive-Rite

Kit Codes: C/R = Coil-Rite™
L/R = Level-Rite™

S/A = Semi-Air
F/A = Full Air

DRIVE RITE
AIR SUSPENSION SYSTEMS

For vehicles not listed please contact Drive-Rite using the details below

DRIVE RITE

AIR SUSPENSION SYSTEMS

North West Business Park
Ballcoolin
Dublin 15
Ireland

Tel: +353 1 8612 632

Fax: +353 1 8612 647

Email: info@driveriteair.com

Web: www.driveriteair.com

Key Symbols: ‡ = while supplies last
ⓘ = Intelliride Kit
Φ = Load Sensing Valve kits available.

Minimum Tire to frame Clearance Requirements: ● = 7.5" ●● = 3" ●●● = 9.5" + = 8" ++ = 6" +++ = 6.5"
= Use spacer kit 2366 with heavy duty package. **Do NOT exceed the vehicles recommended GVWR**
OEM/   - For kit approval details please contact Drive-Rite